



EN

LIVE WITH
i ILVE

KITCHEN APPLIANCES
HANDMADE IN ITALY

USER, OPERATING & INSTALLATION MANUAL

PRO-LINE, PROFESSIONAL PLUS & NOSTALGIE BUILT-IN COOKTOPS

(ALL COOKTOP TYPES)

cod. EI33960070000EN
IT23/2019
AU07/2021

Congratulations, you are now the proud owner of an ILVE cooking appliance. Thank you for purchasing ILVE and welcome to the exciting world of cooking the ILVE way.

This instruction manual has been specially created to inform you of the full range of features your ILVE appliance has to offer and serves as an introduction to the wonderful benefits of ILVE's dynamic cooking systems.

We present detailed information on each of the advanced cooking systems built into ILVE appliances. Once you have read this section you will be able to choose the most appropriate settings for your appliance when cooking different types of food.

We ask you to read the instructions in this booklet very carefully as this will allow you to get the best results from using your appliance.
KEEP THE DOCUMENTATION OF THIS PRODUCT FOR FUTURE REFERENCE.

YOUR FREE MASTERCLASS

Although we encourage you to dive right in, as the owner of a brand new ILVE oven we'd also like to invite you to attend a complimentary 2 hour masterclass. As part of the class you'll learn how to prepare and cook a number of delicious signature ILVE dishes, not to mention our top tips for getting the most out of your ILVE oven. From improving cooking results to general maintenance information, we know you'll enjoy this comprehensive, fun masterclass.

Simply go to ilve.com.au/bookings or Phone 1300 MY ILVE (694 583)





OPEN 24/7
ILVE ACCESSORIES ONLINE SHOP

For a wide range of Genuine ILVE accessories at the
click of a button go to ilve.com.au

CONTENTS

4 IMPORTANT SAFETY WARNINGS

11 INSTRUCTIONS FOR USE

- 11 Use of the cooking hob
- 13 Correct use of burners
- 15 Correct use of the grills
- 18 Use of the gas fry-top
- 20 Use of the gas barbeque (optional)

21 CLEANING AND MAINTENANCE

- 21 Cleaning the appliance
- 22 Total black burners

23 INSTALLATION

- 23 Instructions
- 24 Built-in installation
- 25 Built-in tops' hole size
- 28 Electric connection
- 29 Gas connection and transformation
- 31 Adjustment and/or adapting to different types of gas
- 32 Gas regulation
- 33 Gas jets adjustment table
- 34 Replacement of the injectors
- 35 Cooking hob table
- 36 Adjustment of minimum

37 WIRING DIAGRAMS

- 37 Keys

39 TROUBLESHOOTING

- 39 Troubleshooting Guide

41 NOTES

IMPORTANT SAFETY WARNINGS



Appliances' data The data plate, as well as being on the cover, is also on the appliance.

CAUTION

- 1 These warnings refer to different appliance models. Be sure that you have correctly identified the model that you possess (see the data plate).



These warnings are valid for the countries listed on the plate.

- 2 Read the instructions booklet carefully, before using the appliance. This contains very important informations concerning safety during installation, use and maintenance. The instructions booklet must be kept with care for later consultation and for the identification of the serial number.
- 3 The electrical safety of this appliance is only guaranteed if it is properly earthed as required by the regulations in force. It is fundamental to ensure that these regulations have been respected; if you are in doubt, call a skilled technician to have the electrical system checked in detail. The manufacturer does not accept any responsibility for damage caused by a bad earthing system.
- 4 **Before connecting the cooker, check that the technical features on the data plate correspond perfectly with those of the electric system and of the gas mains. The installation / regulation must be made by qualified staff.**
- 5 Check that air circulates freely around the appliance. This appliance is not connected to a combustion products evacuation device therefore the premises' ventilation system must be considered carefully and according to the rules in force.

IMPORTANT SAFETY WARNINGS



-
- 6** When using gas appliances, heat and dampness are generated inside the premises. Good ventilation of the kitchen is required by: keeping the natural vents open or installing a mechanical ventilator (hood). Intensive and prolonged use of the appliance can make supplementary ventilation necessary: opening a window or increasing the power of the hood.
-
- 7** The power cable is supplied without a plug. To connect please refer to the “electric connection” paragraph. We advise not using adapters, multiple sockets or extensions.
-
- 8** Disconnect the power supply when the appliance is not used for some time, switch off the mains and turn off the gas.
-
- 9** When the electric cable is damaged, it must be replaced by calling an after sales service approved by the manufacturer.
-
- 10** The appliance must only be used for the purposes for which it was intended (cooking). Any other use (for example, heating a room) is incorrect and therefore dangerous. The manufacturer declines all responsibility for damage caused by similar incorrect uses.

The unit is not intended to be operated by an external timer or a separate remote control system.

-
- 11** The use of any electrical appliance requires that the following rules are respected:
- A. never touch the appliance when you have wet or damp hands or feet;
- B. never use the appliance in your bare feet;

IMPORTANT SAFETY WARNINGS



-
- C. avoid using extensions or, if this is inevitable, take all possible precautions;
- D. Never pull on the electric cable to remove it from the power socket;
- E. do not expose the appliance to weathering (rain, sun, etc.);
- F. Be careful: the accessible parts may become very hot during use. Keep children less than 8 years old away from the cooker, if not continuously supervised. This appliance can be used by children from 8 years old and by persons with reduced physical, sensory or mental abilities otherwise with lack of experience and knowledge if they are adequately supervised or if they have been instructed on the safe use of the cooker and if they realise the relevant dangers. Children must not play with the cooker. Cleaning and maintenance must not be done by unsupervised children.
-
- 12** BE CAREFUL: some accessible parts may have high temperatures during use: keep children at a distance.
-
- 13** Before cleaning the appliance or carrying out maintenance, disconnect the power supply by removing the plug from the socket or switching the current off through the switch provided. In the event of faults or malfunctions, switch off the appliance, turn off the gas tap and do not attempt to make any repairs; these must be carried out exclusively by an approved service centre. Always insist on original spare parts. Failure to follow these indications may endanger the safety of the cooker.

IMPORTANT SAFETY WARNINGS



- 14** Never place unsteady or deformed pans on the burners or on the electric hotplates as they could overturn accidentally.

When the appliance is not in use, ensure that all the knobs are in the “●”/“○”/OFF position.

- 15** Never leave the hotplate switched on without a pan on it, otherwise it will reach a very high temperature quickly and the cooker or furniture in the vicinity could be damaged.
- 16** Some parts of the cooker, especially the electric hotplates, stay warm for a long time after use. Be careful not to touch them.
- 17** Do not keep below the cooker and do not use inflammable liquids (detergents, sprays, alcohol, petrol ...) near the cooker when it is switched on.
- 18** If using small electric appliances near the hob, be sure to prevent the electric cable from touching the appliance's hot parts.
- 19** In order to work properly, gas cookers must be installed in well ventilated premises. Ensure that installation is carried out according to the indications given in the “Installation” chapter.
- 20** The materials used in the construction of our electrical appliance are compatible with the environment and therefore recyclable. Packaging remains should not be left within the reach of children, but disposed of using specific recycling channels. The possibility of disposing of your equipment through your local retailer and/or town council should be investigated; remember to make your appliance unusable before scrapping it.

IMPORTANT SAFETY WARNINGS



- 21** In case the tap is hard or precarious to turn, do not intervene on the tap but shut off the gas and have the authorised service centre intervene.



Do not modify or change the cooker.

- 22** Be careful: leaving the unguarded cooker with objects, fats and oils can be dangerous and can cause a fire.
- 23** The cooker must be used by responsible people. Be careful: the use of inappropriate or unsuitable protections can cause fires and / or damage.
- 24** Be careful: cooking with fat or oil can be dangerous or cause fires.
- 25** Be careful: fire danger: do not keep objects on cooking surfaces.
- 26** Be careful: in the case of fire never attempt to extinguish a flame / fire with water, but turn the appliance off and cover the flame with a lid or with a fireproof cover.
- 27** Be careful: metal objects such as knives, forks, spoons or lids should not be placed on the cooker because they can get hot.
- 28** Be careful: do not use gas burners if the flame is unstable.
- 29** Ensure that the flame diffusers are properly positioned in their seats with their respective caps.
- 30** Do not leave the cooker unguarded during any cooking that can spit fats or oils.
- 31** Do not touch the appliance's heating elements when on. Let them cool before proceeding with any cleaning.

IMPORTANT SAFETY WARNINGS



- 32 Food preparation in plastic or aluminium containers on hot cooking zones is forbidden just like the positioning on the cooking surfaces of plastic or aluminium foil objects.
- 33 Do not cover the burners or the hob with tinfoil.
- 34 Do not use the appliance's surface as a work top, sharp objects might scratch it.
- 35 Containers or grills must be positioned within the hob's perimeter.
- 36 Be careful: do not use frying pans, saucepans, grills or stones for grilling of a greater size than the maximum ones indicated for each single burner; above all they must not cover more than one burner at the same time. The heat accumulation might damage the cooker.
- 37 In case of liquid spilling over, remove it from the hob.
- 38 Do not place empty saucepans on the cooking areas.

INSTRUCTIONS FOR USE

Use of the cooking hob


WARNING

Keep children and the disabled away during operation. Do not use the appliance as a heating source.

General notes

To keep the appliance efficient and safe, maintenance must be entrusted to specialised technicians or to the after-sales service staff. Choose covered pans based on the quantity of food to cook.

IMPORTANT

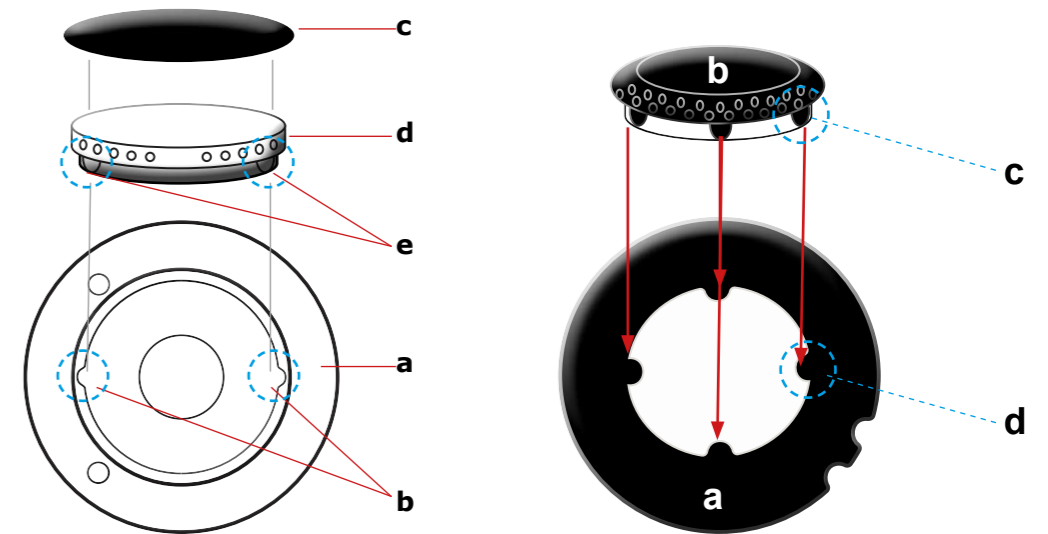


Position the brass flame distributor "d" (fig. C) properly. For this, line up the tooth "e" on the flame distributor with the hollow "b" of the aluminium cup "a".

Position the brass flame distributor "b" properly. For this, line up the tooth "c" on the flame distributor with the hollow "d" of the aluminium cup "a".

Lighting the burners

The index above the knobs fig.12a will help you to find the corresponding burner. Press the knob by turning it anticlockwise and bring it to the ignition position; keep the knob pressed for about 5 seconds so that upon its release the flame remains alight (in case of unsuccessful ignition repeat the operation).

Symbols	Function
●	Off
◊	Maximum
◊	Minimum
◻	Index

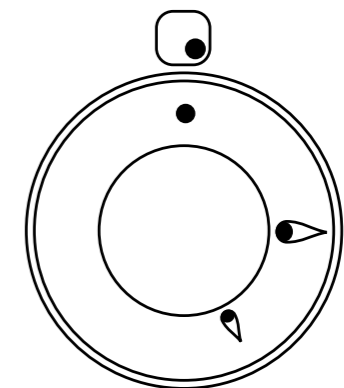

INSTRUCTIONS FOR USE

Use of the cooking hob

Pots to be used according to the size of the burners



Burners	ID	Diameter Ø (cm)
Medium	SR	10/20
Large	R	20/24
Fish burner	P	oven pans
Ring	TC/DCC	22/28
Dual ring	DUAL	24/30

Igniting the Triple ring burner "DUAL"

Identify the knob with the help of the index placed at the knobs themselves. Press and turn the knob to the (maximum) symbol for 5 seconds. Once the burner is on, continuing to turn the knob anticlockwise leads to a first block of the knob that corresponds to the medium. Applying a slight force the first block is exceeded and the outer crown turns off leaving only the small central burner called AUXILIARY. To adjust the auxiliary burner to minimum, turn the knob anticlockwise until it stops. At this point, to turn the burner back on, turn the knob clockwise to the desired value.

Dual knob

Symbols

Function



Off




Maximum



Minimum



Index

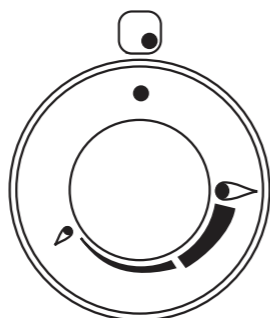

INSTRUCTIONS FOR USE

Correct use of burners

Placement of the burners

BE CAREFUL: always check that the burners are correctly positioned, thus having a homogeneous and not noisy flame.

Burners

Right

Wrong

Medium



Large



Dual ring



Fish burner



Always check that the screws below the burner are fixed.

INSTRUCTIONS FOR USE

Correct use of burners

Positioning of the burners

BE CAREFUL: always check that the burners are correctly positioned, thus having a homogeneous and not noisy flame.

Burners

Right

Wrong

Medium



Large



Dual ring



Fish burner



Always check that the screws below the burner are fixed.

INSTRUCTIONS FOR USE


Correct use of the grills

Placement of the grills

BE CAREFUL: always check that the grills are properly positioned and facing the right way.

Internal grills hole measurement


FISH BURNERS

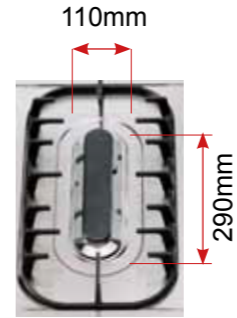

RING (DUAL)



LARGE

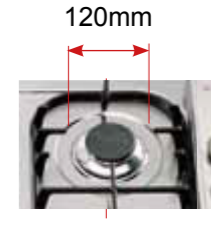

MEDIUM



Different types of grills



H30



H39P



H30C



H90CC

INSTRUCTIONS FOR USE

Correct use of the grills



HP65



H70



HF40



H90P




HF40D



H906



HP45F

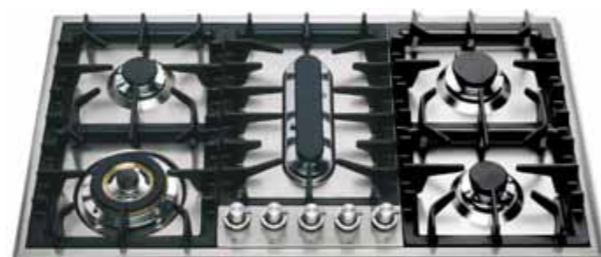

HP95P

INSTRUCTIONS FOR USE

Correct use of the grills



HP95F



HP1230



HP1265





HP120

INSTRUCTIONS FOR USE

Use of the gas fry-top

Instructions


The fry top consists of a stainless steel plate, suitable for contact with food [52] with a uniform temperature of the cooking surface and with a very low heat dispersion. To use the appliance, light the flame underneath the plate by turning the corresponding knob (see "Burner ignition") and make sure the flame is present. Position the knob at the maximum for about 10 minutes and wait for the plate to heat up. After this period of time, the plate is ready to start cooking. By adjusting the flame, you will have no limit to your culinary imagination. The position of the knob on the minimum allows slow or dietetic cooking while, for cooking meat, fish and vegetables, faster cooking is indicated. The fry top plate is also suitable for oriental dishes with an optional (lid) necessary for this type of cooking. Some models are supplied with a spatula (pic. 2) that will help you cooking and cleaning the plate.

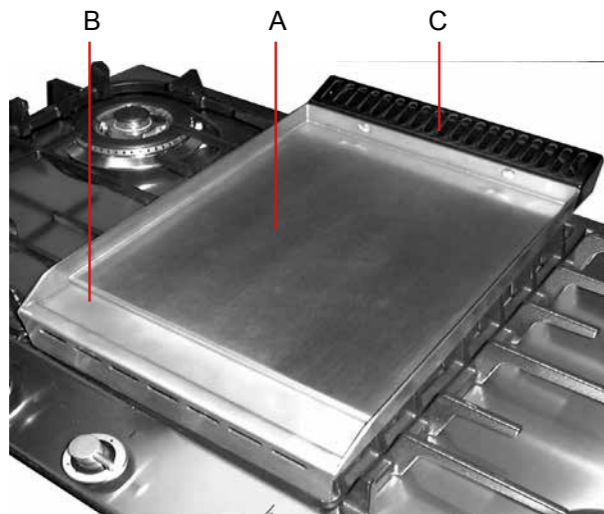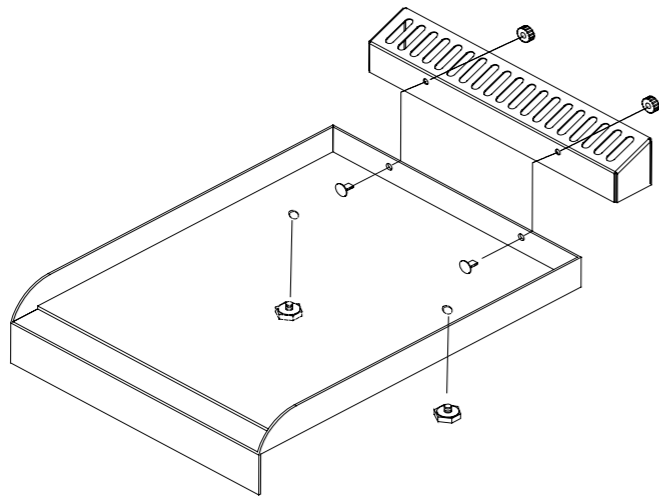

- A = cooking area
- B = drip tray
- C = exhaust flue for combustion flame

INSTRUCTIONS FOR USE

Use of the gas fry-top

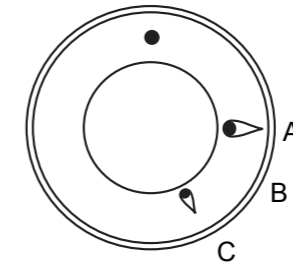

Pic. 1

- A = Max
- B = Med
- C = Min



Pic. 2

Dish	Knob posit. (pic.1)	Time min.
Eggs	B	2
Sliced aubergines (0.5 cm thick)	B	9/13
Sliced potatoes	B	5/7
Sliced courgettes	B	3/5
Fish (sea bream weighing about 200 g)	B	15
Hamburger	B	10
Beefsteak	B	3
Porterhouse (2 cm thick)	A	5

Cleaning and care of the Fry-Top

It is recommended to clean the plate thoroughly at the end of each cooking session. With the plate hot and the flame at minimum, remove the cooking residue using the scraper provided (pic. 2). Pour a little water onto the plate and, still using the scraper, continue cleaning the plate. Once the water has completely evaporated, repeat the same operation even several times until the desired result is obtained. It is extremely important to clean the plate when it is quite hot. The black enamel flue may be cleaned with a soft cloth soaked with a solution of lukewarm water and ammonia. Rinse and dry after cleaning.


INSTRUCTIONS FOR USE

Use of the gas barbeque (optional)

Instructions

Replace the flame spreader A with the flame spreader protected for barbecue B. Before refitting the barbecue plate, make sure you have positioned the flame spreader correctly and carry out an ignition test.

To use the appliance, light the flame underneath the plate by turning the corresponding knob (see "Burner ignition") and make sure the flame is present. Position the knob at the maximum for about 10 minutes and wait for the plate to heat up. After this period of time, the plate is ready to start cooking. Place the burner at minimum and place the dishes on the plate. Consult the cooking table for general information on timing. You may find cooking times different from those shown in the table. This is completely normal, as times change according to the quantity and temperature of the food, the type of gas and, of course, your personal taste.

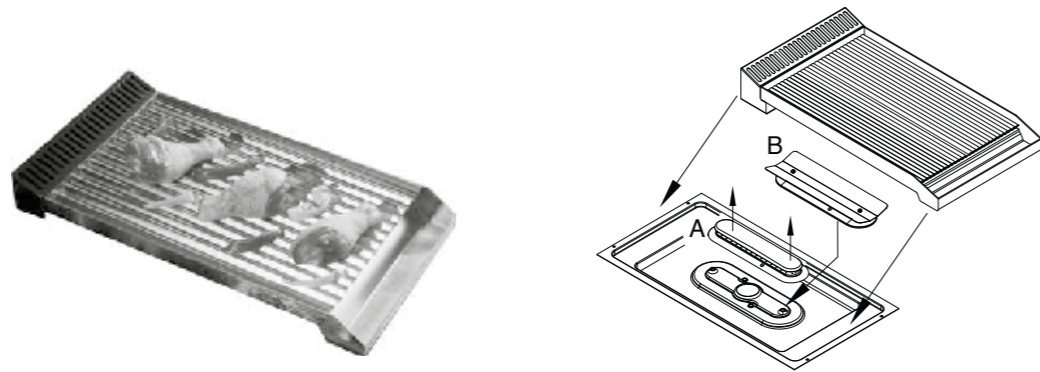

Barbeque cleaning

Allow the barbecue to cool before cleaning. Use a slightly abrasive sponge or a brush with brass bristles following the satin finish of the plate. It is important to remove the incrustations that form between one lamella and the other. It is advisable to clean the plate after each cooking. Like all barbecues, the plate with use loses its brilliance and can create dark halos. Once cooled, the fireplace is cleaned with a soft cloth soaked in a solution of warm water and ammonia.

Dish	Knob posit. (pic.1)	Time min.
Sliced aubergines (0.5 cm thick)	B	3/15
Sliced potatoes	B	5/7
Sliced courgettes	B	4/6
Fish (sea bream weighing about 200 g.)	A	10
Hamburger	A	10
Beefsteak	B	3

CLEANING AND MAINTENANCE

Cleaning the appliance

Warning



Before carrying out any cleaning operation, disconnect the appliance from the power supply and close the general gas cock to the appliance. Cleaning the worktop: clean the hob only after cooling. Periodically the burner cups, the enamelled grills, the enameled lids, and the flame spreader must be cleaned with lukewarm soapy water, rinsed and dried well. Any liquid overflowing from the pans must always be removed with a rag. Cleaning the enamelled parts: To maintain the characteristics of the enamelled parts, it is necessary to clean them frequently with soapy water. Never use abrasive powders or metal pads. Avoid leaving acid or alkaline substances (vinegar, lemon juice, salt, tomato juice, etc.) on the enamelled parts and wash when the enamelled parts are still hot.

Cleaning of stainless steel parts

Clean the parts with warm water and non-corrosive liquid detergent and then dry them with a soft cloth or microfibre. The brilliance is maintained by periodic cleaning with special products normally available on the market. Never use abrasive powders.

Food stains or residues

Absolutely avoid using steel sponges and sharp scrapers to avoid damaging the surfaces. Use normal, non-abrasive products, possibly with the aid of wooden or plastic tools. Rinse thoroughly and dry with a soft cloth or a microfibre cloth. Avoid leaving residues of sugary food (such as jam) inside the appliance as they could damage the enamel in the appliance.

Cooking hob grills



Remove the grids and clean them in warm water and a non-abrasive detergent. Carefully remove any encrustations. Dry them and place them on the hob. The continuous contact of the grids with the flame can cause an alteration of the enamel in the vicinity of the areas exposed to heat. This is a completely natural phenomenon that does not affect the functionality of this component at all.

Igniters and thermocouples

For good operation, the ignition plugs and thermocouples must always be well cleaned. Check them frequently and if necessary clean them with a damp cloth. Any dry residues must be removed with a wooden toothpick or a needle.

Flame distributor rings and covers



The flame-spreader crowns and the lids are removable for easy cleaning. Wash them in hot water and non-abrasive detergent. Carefully remove any encrustations and wait until they are perfectly dry.

In the event of a malfunction, make sure that the holes in the outer crown are always perfectly clean.

The use of the dishwasher for cleaning grills, flame spreaders and lids is not recommended

CLEANING AND MAINTENANCE

Total black burners

Total black burners coated with treatment nanotechnology

In order to preserve the quality of the coating, some cleaning and washing methods are recommended:

- Allow the product to cool to room temperature before cleaning. It is advisable not to immerse it in cold water when it is still hot.
- Wash with warm water, and with a minimum of neutral detergent. Rub with a cloth, preferably in natural cellulose, or a non-abrasive sponge.
- Do not use powders, iron wool, abrasive cloths or sponges.
- Do not let food burn on the burner. In the event of surface stains / stains may appear. These traces do not alter the functionality of the product, and in some cases they can be eliminated with this procedure: immerse the product in hot water, with detergent, rub gently with a cloth, preferably in natural cellulose, in any case do not use cloths or abrasive sponges. For more resistant stains it is advisable to heat white vinegar and rub as indicated above.
- Avoid leaving the burners in contact with food for a long time, especially if acids, such as tomato sauce.
- Avoid contact with metal objects, if it is the case to use wooden or plastic objects.
- Avoid washing in the dishwasher, a part of the product is not coated and would be irreparably damaged.
- In the event of a malfunction, make sure that the holes in the outer crown are always perfectly clean.



INSTALLATION

Instructions

Installation instructions

This appliance complies with the following directives
 DIRECTIVE EU2002/96/EEC
 LOW TENSION DIRECTIVE EEC 2014/35/EU
 GAS DIRECTIVE 2009/142/EC
 ELECTROMAGNETIC COMPATIBILITY DIRECTIVE 2014/30/EU
 REGULATION No. 1935/2004 (contact with foods)

Installation must only be made by qualified personnel in the respect of regulations for permanently ventilated premises according to UNI 7129 01/02/04 – 7131.

Ventilation of the premises

This appliance is type “A” and not to be joined to a combustion products’ expelling device but must be installed under a hood or another smoke extraction system in compliance with the rules in force. The knowledge and consultation of the rules is critical for a qualified installer. As an indication, remember that the air necessary for burner combustion is 2m³/h for each kW of nominal power installed (see plate). If the appliance is used intensively and for a prolonged time, supplementary ventilation may be necessary; in this case open a window or increase the power of the mechanical extractor hood.

Fitting the cooking hob onto the base unit with door

The unit must be made in such a way that the flames are not blown out if the doors are opened or closed rapidly. The bottom of the cooking hob must not be subject to depression or pressure when the doors are opened or closed. We advise working as shown in the figure (A). The panel under the hob must be easy to remove for maintenance purposes.

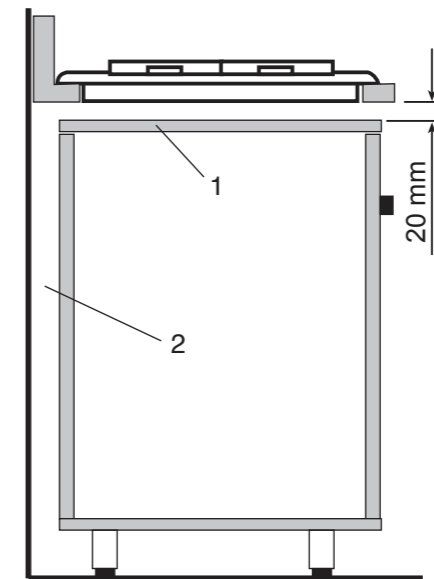


Fig. A

INSTALLATION


Built-in installation

Built-in installation


All the built-in tops are designed to be mounted on furniture with surfaces of any material and with a thickness varying from 3 to 4 cm. To avoid excessive overheating of the side and rear walls, it is recommended to drill the hole for the surface recessed, at a minimum distance of 45-50 mm, respecting the measurements shown in the table (pic. 1). To avoid infiltration of liquids under the worktops, it is essential to apply the appropriate healing (C), which is supplied with the top.

Fixing to the cabinet is done with the brackets that are supplied with the appliance (pic 2a, 2b, 2c).


For counter tops (HP665, HP965, HP1265, HAP95, HAP125, HP90, HP120 ...), the support surface must have the surface base equal to the appliance and a strength such as to support a weight of at least 100 kg.

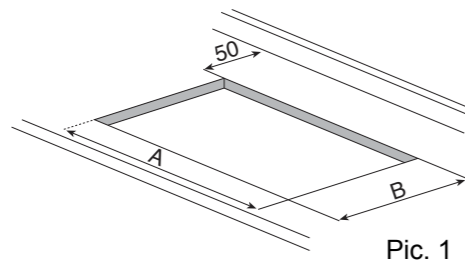

Pic. 1

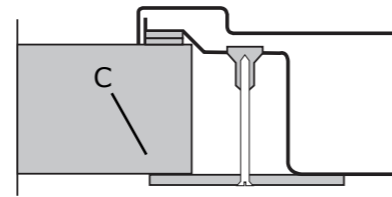

Pic. 2a

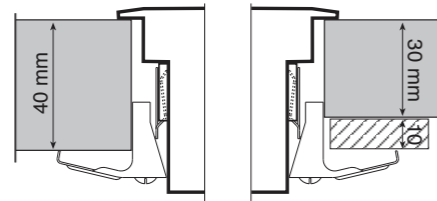

Pic. 2b
(mod. HP65, HP75, HP95, HP125)

Installing and securing the cooktop

Our appliances can be fitted as:

- freestanding, Class 1
- fitted between units, Class 2/1
- built-in into units, Class 3

The minimum distances from the furniture must be:

- between top and overhead hood 650 mm
- between top and overhead cabinet 700 mm
- between top and back wall 50 mm
- between top and overhead side wall 50 mm
- between top and lower wall 20 mm
- the built-in top fitted onto a base unit with door must be installed according to picture A
- the cooking hobs for supported appliances must support a weight of at least 100 kg
- the furniture must resist at least up to 120°C
- the thickness of the top must be at least 3 cm


The built-in appliances must be inserted (see pic. 1), fixed (see pic. 2a, 2b) with the brackets, applying the appropriate seal (C) between the furniture and the appliance. The application of the hob in the furniture can also be done with an oven below paying attention to the path of the power cable that must not come into contact with hot surfaces (50 ° C beyond the environment).



INSTALLATION

Built-in tops' hole size








<p>MOD. H30 - H30P - H30C</p> <p>dimensioni foro incasso 672 x 490</p>	<p>MOD. HP75</p> <p>dimensioni foro incasso 672 x 490</p>	<p>MOD. HP45F</p> <p>dimensioni foro incasso 380 x 490</p>
<p>MOD. H36</p> <p>dimensioni foro incasso 555 x 475 - *H60 = 50</p>	<p>MOD. HP65</p> <p>dimensioni foro incasso 570 x 490</p>	<p>MOD. H39</p> <p>dimensioni foro incasso 835 x 475 - *H90 = 50</p>
<p>MOD. H38</p> <p>dimensioni foro incasso 755 x 475</p>	<p>MOD. HP95</p> <p>dimensioni foro incasso 860 x 490</p>	<p>MOD. XLP90</p> <p>dimensioni foro incasso 875 x 580</p>

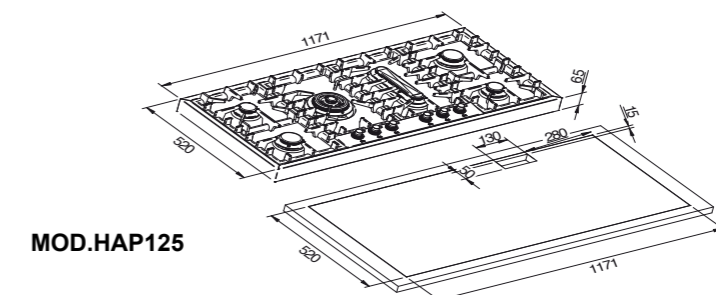


MOD. HAP125

INSTALLATION

Built-in tops' hole size

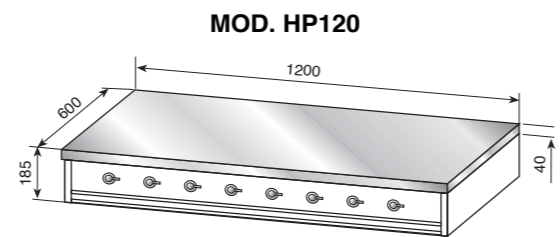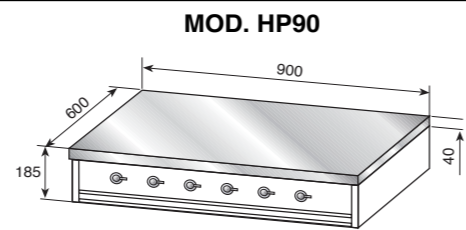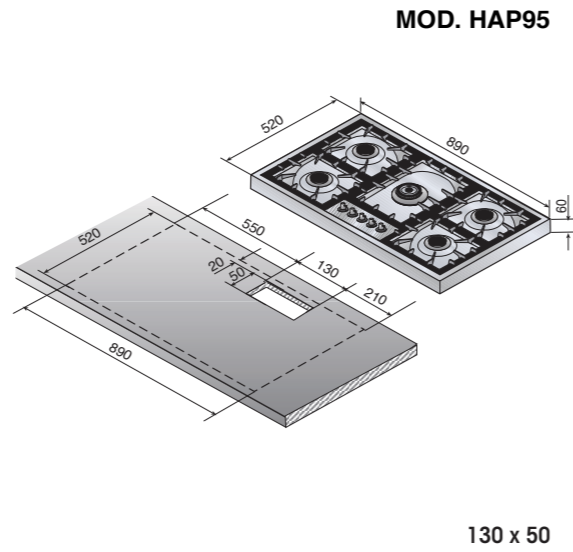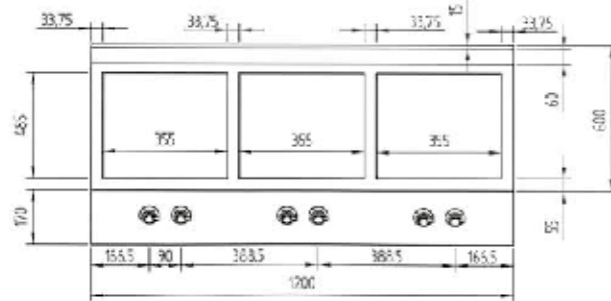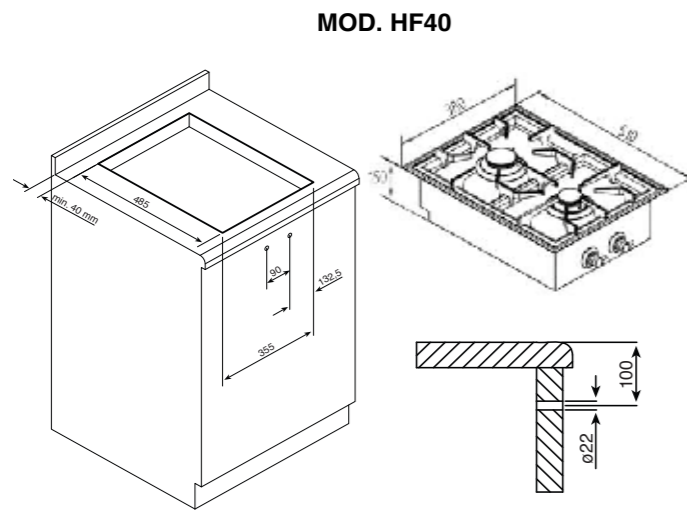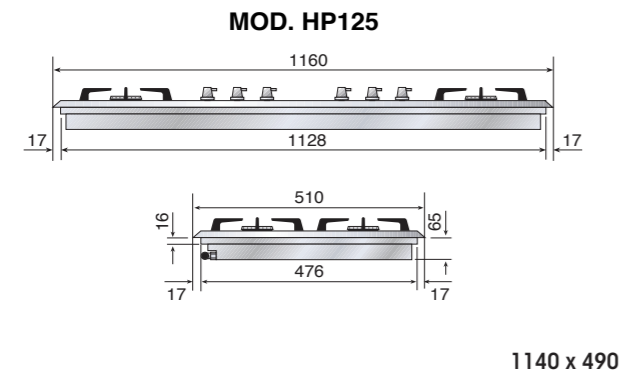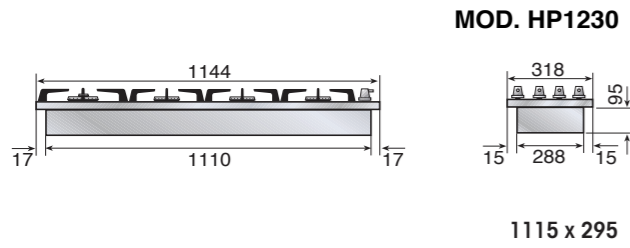


MOD. HP665 - HP965 - HP1265

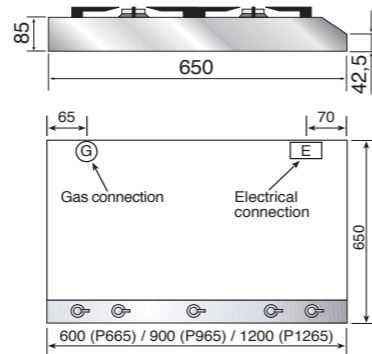

INSTALLATION


Built-in tops' hole size

MOD. HC60

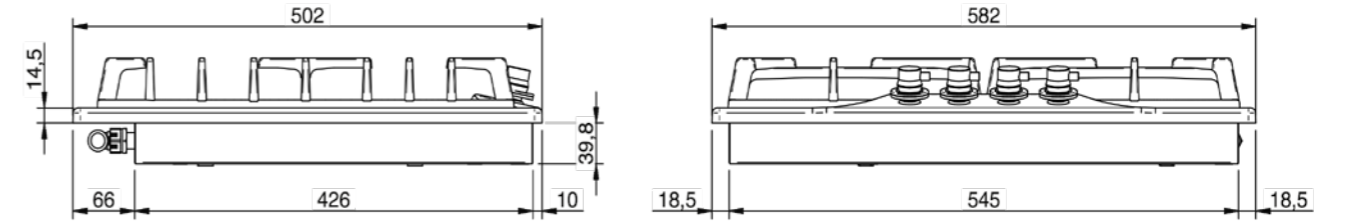


Built-in tops' hole size: 555 x 475

MOD. HC70

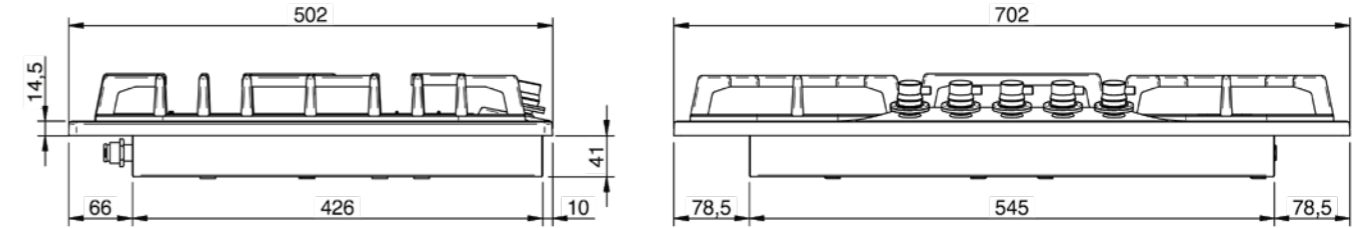


Built-in tops' hole size: 555 x 475

MOD. HC70SD

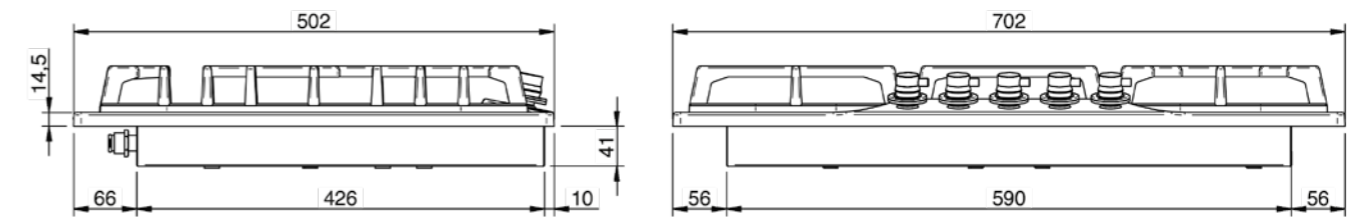

Built-in tops' hole size: 640 x 475

MOD. HC90

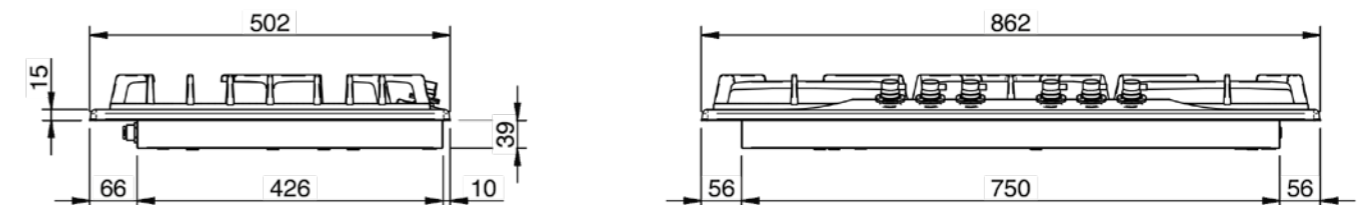

Built-in tops' hole size: 835 x 475

INSTALLATION

Electric connection

The appliances are prepared for connection to the voltage shown on the data plate.

Before connecting the appliance to the mains check that:



- the electromagnetic switch or the socket are able to support the appliance's load (see data plate);
- the power supply system must have an efficient earth.

The appliance is supplied with a cable but without a plug: the connection must be made taking into account that the green-yellow cable is the earth conductor \perp and it must never be interrupted.

For direct connection to the mains, it is necessary that:

- the relief valve and domestic system can support the equipment's load (see data plate)
- the power supply system must have an efficient earth
- the socket or omnipolar switch, with a minimum 3 mm contact opening, must be easily reached once the appliance has been installed a mains shut-off must be incorporated in accordance with installation rules.



The green-yellow earth cable must never be interrupted even by the switch. The power cable must be routed in such a way that it does not come into contact with surfaces that have a temperature greater than 50°C above room temperature. If cable replacement is necessary contact the after-sales service.

Power	(230V)	(240V)
Hotplate (Ø 115)	550 W	600 W
Hotplate (Ø 115)	920W	1000 W
Hotplate (Ø 115)	1380 W	1500 W
Barbeque	1900 W	2070 W
Barbeque*	2650 W	2880 W

* HP965B, HP1265B, HP90B, HP120B

INSTALLATION

Gas connection and transformation

Gas connection

(UNI CIG 7129/7131)

The appliances must be attached to the gas pipeline with rigid or flexible metal pipes (maximum length 2 metres) suitable for gas appliances. The connection pipes and their maximum length must comply with the applicable standards, replaced before the expiry date (if indicated on the pipe) and connected to the appliance by a coupling:

- A) Directly on the ISO R228 fitting (seal with ISO R228 seal), if the pipe path allows it, see pic. 3
- B.1) In the event that the connection should be directed (right-left-low), it is necessary to interpose the fitting (pic. 4a - fig. 4b) supplied
- B.2) For the seal between the pipe and the ramp use the gasket (ISO R228) pic. 4a
- B.3) For sealing on the thread (ISO R7) conical fittings with the thread seal must be used (pic. 4b)
- B.4) To improve the seal a mastic suitable for GAS can be used.

When the gas is drawn from a cylinder, the appliance, supplied with a pressure regulator compliant with standard UNI-CIG 7432, must be connected: with flexible stainless steel pipes along the wall, according to standard UNI-CIG 9891, with 2 metres maximum extension and sealing gasket according to standard UNI 9264..

Precautions for using the product with gpl gas

The gas taps fitted in your kitchen must work with liquid gas of controlled quality, supplied at the proper nominal pressure. This pressure must be guaranteed by a special certified pressure regulator. The use of gas coming from uncertified sources and/or the improper use of the GPL cylinder as well as the relative regulator, can invalidate the product's guarantee. It is especially necessary to avoid all the situations that could pollute the gas with residues and impurities that, when introduced into the gas circuit, can irreparably damage the control components such as taps and thermostats. It is recommended to:

- use only GPL cylinders coming from official retailers and authorised by the various manufacturers;
- use the cylinders until empty without inclining or overturning them;
- carry out regular cleaning of the filter at the pressure regulator inlet;

WARNING

When the connection is made, it is recommended to check the connections' seal with special foams (NO FLAMES).


IMPORTANT



Periodically check the gas connection pipe's good condition and replace it when there are signs of anomalies.

INSTALLATION

Gas connection and transformation

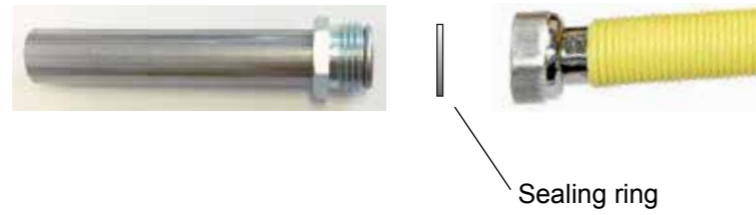

Pic. 3



Pic. 4a



Pic. 4b

INSTALLATION

Adjustment and/or adapting to different types of gas



The hobs are delivered to operate as indicated on the data plate. If a transformation should be necessary, proceed as described in the next paragraph.

Adjustment and/or adapting to different types of gas

Injector replacement and air adjustment for models:

H30 - H360 - H380 - H39 - HF40 - HP45F - HP65 - HP75 - HP95 - HAP95 - XLP90F - HP1230 HP125 - HAP125 - HP665 - HP965 - HP1265 - HP90 - HP120

1. Remove the grill and the burners from the worktop.
2. Unscrew the screws marked with the arrows that fix the worktop to allow it to be raised, pic. 5, pic. 5a, pic. 5b.
3. Unscrew venture pipe screw "F" (pic. 6, pic. 7) and open completely the air regulator "R".
4. Unscrew the injectors (U) and replace them with those suitable for the gas in use and supplied with the appliance. Refer to table 1 on page 19.
5. Air adjustment is made by the special regulator "R" based on the "X" values shown in table 1, on page 19, opening of primary air. When adjustment is over block the regulator "R" with screw "F".

Pic. 5




Pic. 5a




Any adjustment, maintenance, etc... must be made by an authorised technician after having disconnected the appliance from the mains and shut off the gas supply.

INSTALLATION


Gas regulation

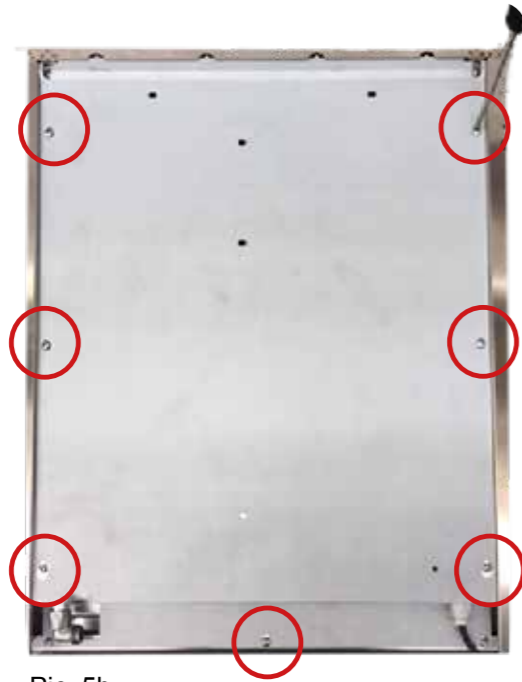

Pic. 5b

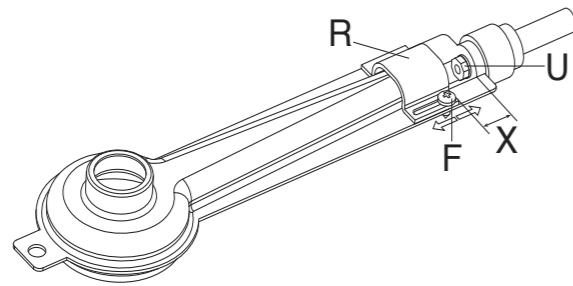

Pic. 6

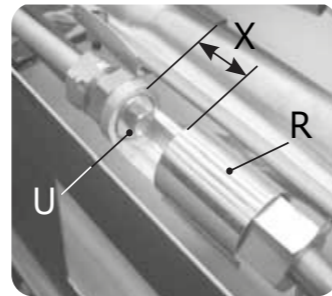

Pic. 7

Examples of air regulation (for information)


A	B
<p>Flame with too much air: small and drawn. Decrease the "X" amount</p>	<p>Flame with scant air: Irregular with yellow points. Increase the "X" amount.</p>
<p>C</p> <p>Correct flame: Blue</p>	

INSTALLATION

Gas jets adjustment table

Gas jets adjustment table

	SR	R	P	C	DUAL	DUAL
Qmax kW	1,80	2,60	3,10	4,30 / 3,40 ⁽³⁾	4,50 / 3,60 ⁽³⁾	5,00 / 3,60 ⁽³⁾
Qmax g/h	131	189	225	313	327	364
Qmin kW	0,40 / 0,51 ⁽¹⁾ / 0,45 ⁽²⁾	0,60 / 0,76 ⁽¹⁾ / 0,66 ⁽²⁾	1,20 / 1,57 ⁽¹⁾ / 1,35 ⁽²⁾	1,70 / 2,20 ⁽¹⁾ / 1,90 ⁽²⁾	0,37	0,37
Qmin g/h	29 / 37 ⁽¹⁾ / 33 ⁽²⁾	44 / 55 ⁽¹⁾ / 48 ⁽²⁾	87 / 114 ⁽¹⁾ / 98 ⁽²⁾	124 / 160 ⁽¹⁾ / 138 ⁽²⁾	27	27
G30/G31 28.30/37 mbar	0,82	0,78	0,82	1,00	0,35	0,35 ⁽⁴⁾
G30/G31 50 mbar	0,55	0,68	0,75	0,90	0,33	0,33 ⁽⁴⁾
G30 37 mbar	0,62	0,74	0,82	0,92	0,35	0,35 ⁽⁴⁾
G20 20 mbar	0,87	1,17	1,30	1,50	0,55	0,55 ⁽⁴⁾
G20 25 mbar	0,87	1,10	1,17	1,35	0,55	0,55 ⁽⁴⁾
G25 20 mbar	1,05	1,30	1,45	1,65	0,62	0,62 ⁽⁴⁾
G25 25 mbar	0,97	1,23	1,35	1,55	0,62	0,62 ⁽⁴⁾
G2.350 13 mbar	1,35	1,65	1,85 / 1,80 ⁽⁴⁾	2,20	0,78	0,78 ⁽⁴⁾
G25.1 25 mbar	1,05	1,25	1,35	1,60	0,62	0,62 ⁽⁴⁾
G110 8 mbar	1,90	2,45 / 2,30 ⁽⁴⁾	3,00 / 2,60 ⁽⁴⁾	3,30	1,10	1,10 ⁽⁴⁾
G120 8 mbar	1,75	2,30 / 2,20 ⁽⁴⁾	2,60 / 2,40 ⁽⁴⁾	3,20	1,05	1,05 ⁽⁴⁾
G150.1 8 mbar	1,85	2,40	3,20 / 2,80 ⁽⁴⁾	3,30 / 3,20 ⁽⁴⁾	1,10	1,10 ⁽⁴⁾
G30/G31	0,30 / 0,32 ⁽⁴⁾	0,38 / 0,40 ⁽⁴⁾	0,50 / 0,52 ⁽⁴⁾	0,61 / 0,64 ⁽⁴⁾	0,27	0,27 ⁽⁴⁾
G20	REG	REG	REG	REG	REG	REG
G25	REG	REG	REG	REG	REG	REG
G2.350 13 mbar	REG	REG	REG	REG	REG	REG
G110/G120	REG	REG	REG	REG	REG	REG
G30/G31	2,00	6,00	20,00	20,00	20,00	20,00
G20	2,00	3,00	3,00	6,00	20,00	20,00
G25	2,00	3,00	3,00	4,00	20,00	20,00
G2.350 13 mbar	0,00	3,00	5,00	5,00	20,00	20,00
G110/G120	0,00	0,00	0,00	3,00	1,00	1,00
G150.1 8 mbar	0,00	0,00	0,00	3,00	1,00	1,00
(1)=DE AT	(2)=PL	(3)=G110/G120/G150.1	(4)=RUBINETTO CUCINE			

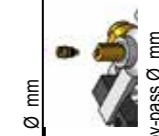


INSTALLATION


Replacement of the injectors

HC60 – HC70 – HC90

1. Remove the grill and the burners from the hob.
2. SR – R – P burners: unscrew injectors “U” using a 7-mm spanner (fig. 8) and replace them with those for the new gas according to table number 2 on page 20.
3. DCC – Dual burners: unscrew the 2 screws “P” and remove cover “C” fig. 9. unscrew injectors “U” using a 7-mm spanner (fig. 10, fig.11) and replace them with those for the new gas according to table number 2 below.

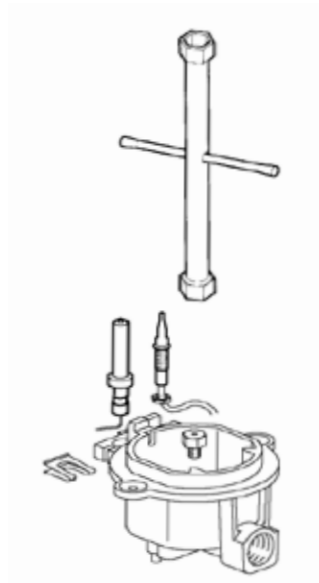

Pic. 8

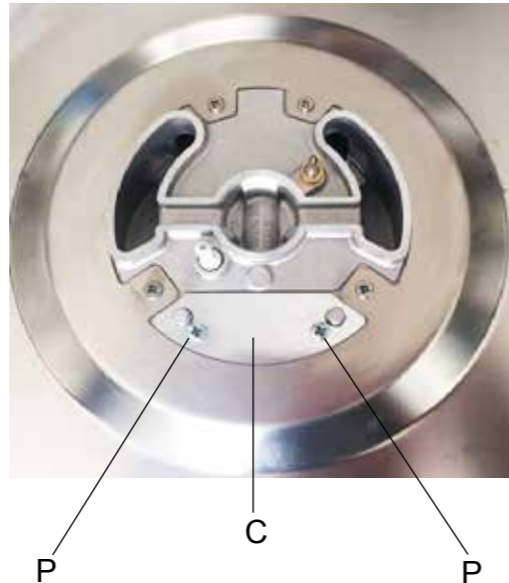

Pic. 9



Pic 10



Pic. 11

INSTALLATION

Cooking hob table HC60, HC70, HC90

Cooking hob table

	SR	R	P	DCC	DUAL
Qmax kW	1.80 / 1.70 ⁽⁵⁾	3.00 / 2.80 ⁽⁵⁾	3.10 / 2.6 ⁽⁵⁾	4.20 ⁽⁵⁾ / 4.30 / 3.40 ⁽⁵⁾ / 3.10 ⁽⁵⁾	4.50 / 3.80 ⁽⁵⁾ / 3.5 ⁽⁵⁾
Qmax g/h	131	218	225	305 ⁽⁵⁾ / 313	327
Qmin kW	0.40 / 0.51 ⁽¹⁾ / 0.45 ⁽²⁾	0.60 / 0.76 ⁽¹⁾ / 0.66 ⁽²⁾	1.20 / 1.57 ⁽¹⁾ / 1.35 ⁽²⁾	1.70 / 2.20 ⁽¹⁾ / 1.90 ⁽²⁾	0.30
Qmin g/h	29 / 37 ⁽¹⁾ / 33 ⁽²⁾	44 / 55 ⁽¹⁾ / 48 ⁽²⁾	87 / 114 ⁽¹⁾ / 98 ⁽²⁾	124 / 160 ⁽¹⁾ / 138 ⁽²⁾	22
G30/G31 28...30/37 mbar	0.68 / 0.222	0.85 / 0.222	0.86 / 0.222	1.05 / 0.222	0.44 / 0.222
G30/G31 50 mbar	0.58 / 0.264	0.75 / 0.265	0.75 / 0.222	0.83 / 0.315	0.43 / 0.102
G30 37 mbar	0.62 / 0.222	0.80 / 0.222	0.82 / 0.222	1.00 / 0.222	0.41 / 0.222
G31 27.5 mbar AUSTRALIA	0.70 / 0.222	0.92 / 0.222	0.95 / 0.222	1.12 / 0.222	0.50 / 0.222
G20 20 mbar	0.97 / 0.211	1.30 / 0.103	1.30 / 0.222	1.50 / 1.048	0.70 / 0.101
G20 10 mbar AUSTRALIA	1.18 / 0.222	1.55 / 0.222	1.55 / 0.222	1.95 / 0.222	0.80 / 0.222
G20 25 mbar	0.91 / 0.211	1.10 / 0.210	1.23 / 0.222	1.50 / 0.103	0.65 / 0.101
G25 20 mbar	1.00 / 0.210	1.34 / 0.332	1.42 / 0.222	1.64 / 0.332	0.72 / 0.306
G25 25 mbar	0.98 / 0.210	1.26 / 0.332	1.28 / 0.332	1.48 / 0.332	0.75 / 0.306
G25 3 25 mbar	0.94 / 0.210	1.26 / 0.332	1.26 / 0.332	1.48 / 0.332	0.75 / 0.306
G2 350 13 mbar	1.26 / 0.210	1.64 / 0.332	1.70 / 0.332	2.10 / 1.048	2.10 / 1.048
G25 1 25 mbar	0.98 / 0.210	1.25 / 0.309	1.28 / 0.332	1.52 / 0.332	0.71 / 0.306
G150 1 8 mbar	1.90 / 0.224-2	2.75 / 0.224-3	2.70 / 0.224-6	3.50 / 0.0003	1.45 / 0.0004
G110 8 mbar	1.90 / 0.224-2	2.75 / 0.224-3	2.70 / 0.224-6	3.50 / 0.0003	1.45 / 0.0004
G30/G31	0.30	0.38	0.56	0.66	0.24
G20	REG	REG	REG	REG	REG
G25	REG	REG	REG	REG	REG
G2 350 13 mbar	REG	REG	REG	REG	REG
G110/G120	REG	REG	REG	REG	REG
G110 8 mbar	REG	REG	REG	REG	REG
(2)=PL	(3)=G10/G120	(4)=HC70, HC90C	(5)=G150.1		



Ø mm
by-pass Ø mm
(1)=DE-AT


INSTALLATION

Adjustment of minimum




When installing the appliance, we recommend checking that the hob's burner minimum has been properly adjusted: a proper adjustment is that when passing from the maximum position to the minimum position, the flame is reduced, stable and homogeneous. If the flame on minimum is incorrect or if the gas has been changed, adjustment must be carried out as follows:

1. Light one burner at a time and turn the flame up to maximum.
2. Remove the knob of the corresponding gas tap..
3. Turn the tap to minimum position.
4. Using a small flathead screwdriver, unscrew, turning to the left, to increase the flame, or screw to the right to decrease it: the by-pass to be adjusted is indicated by the figure B1 and B2.
5. **If a liquid gas is used (Butane-Propane), the screw (by-pass) must be fully screwed in.**

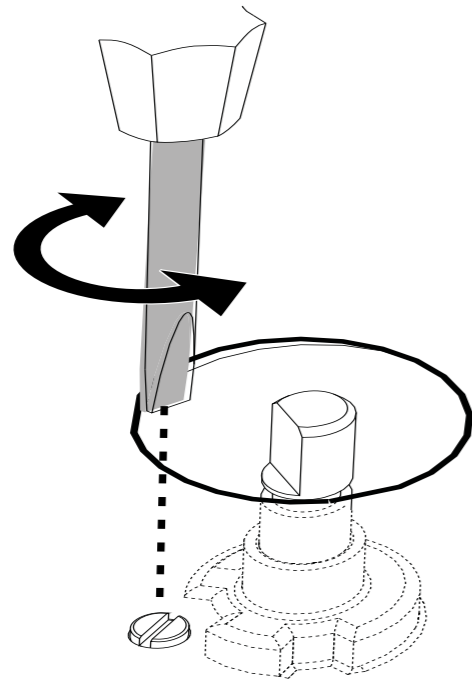

Pic. B1

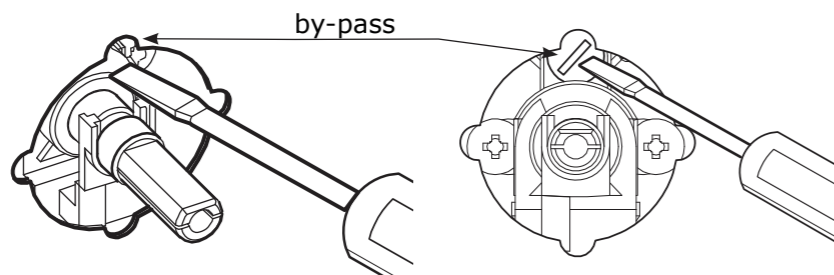

WIRING DIAGRAMS

Keys


Keys

00	Black
11	Brown
22	Red
33	White
44	Yellow
45	Yellow-Green
55	Grey
66	Blue
AA	Electrical ignition transformer
C	Switch
F	Phase
K1	Earth wire for terminal board
K2	" " lower resistance
K3	" " for oven fan
K4	" " circular resistance
K5	" " upper resistance
K6	" " oven lamp 1
K7	" " oven lamp 2
K8	" " rotisserie
K9	" " cooling fan
K10	" " selector
K11	" " oven thermostat
K12	" " programmer/timer
K13	" " grill
K14	" " el. hotplate
K15	" " frame
K16	" " barbecue
K17	" " fryer
L1	Oven lamp
L2	Oven lamp
M	Terminal board
MA	Electrical ignition microswitch
MD	Grill microswitch
MG	Rotisserie
MP	Door microswitch
N	Neutral
P	Timer/Programmer
P	Timer/Clock
PE	Electric hotplate


R1	Upper heating element
R2	Lower heating element
R3	Grill heating element
R4	Circular heating element
R5	Barbecue heating element
R6	Fryer heating element
RE	Energy regulator
S1	Oven warning light
S2	Mains power warning light
S3	Grill warning light
S4	Cooling fan warning
S5	Barbecue warning light
S6	El. hotplate warning light
S7	Turnsplit warning light
S8	Residual heat warning light
S9	Fryer warning light
SP	Sparking plug
T	Grill thermostat
TF	Oven thermostat
TR	Fryer thermostat
TS	Safety thermostat
TT	Cooling fan thermostat
V	Oven fan
VT	Cooling fan

WIRING DIAGRAMS

§ = only models with electric barbecue

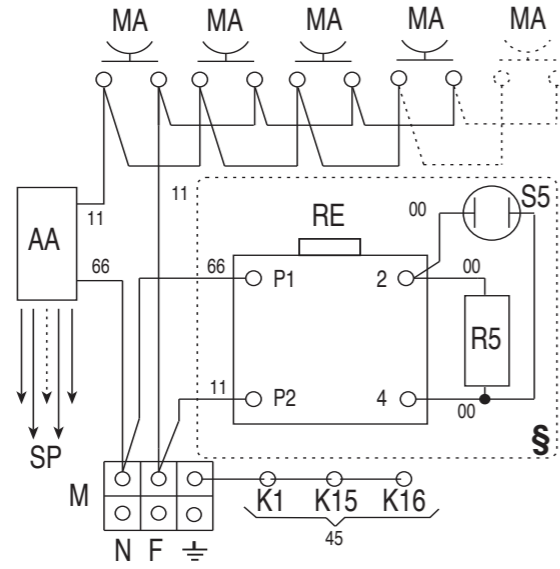

Models H392..., H391...

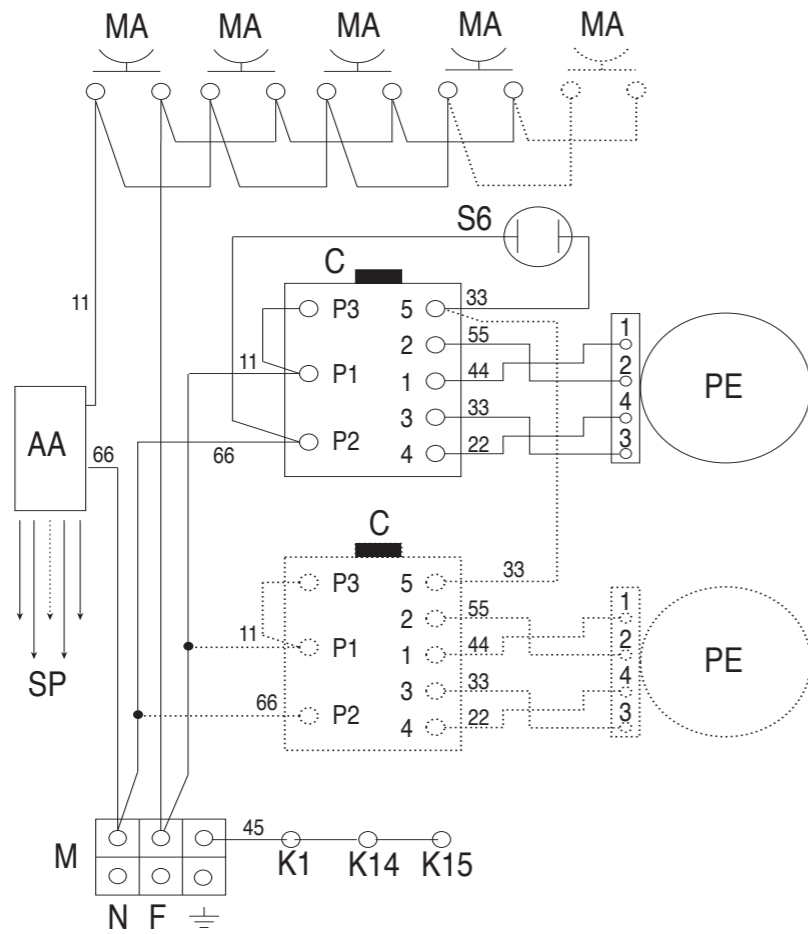

TROUBLESHOOTING

Troubleshooting Guide

- During the warranty period repairs can only be carried out by the authorized After-Sales Service.
- Before repairing, disconnect the appliance from the mains, ie, disconnect the power cord or unscrew the fuse.
- Unauthorized interventions and repairs may cause electrocution or short circuit, so do not perform them. Leave this work to authorized technicians.
- In the case of minor disturbances you can try to solve the problem by following the instructions.
- The assistance service during the warranty is not free, if the device does not work for incorrect use.
- The elimination of faults or complaints, which were caused by use or incorrect installation, will not be repaired under warranty. Warranty costs will be charged to the user.

Below you will find some advice on rectifying some common problems.

PROBLEM	POSSIBLE CAUSE	ELIMINATION
The flame is not uniform.	Gas regulation not suitable.	The gas regulation must be controlled by an expert
The flame changes suddenly.	The burner parts are not positioned correctly.	Position the burner parts correctly.
To light the burners, keep the ignition knob pressed for longer.	The burner parts are not positioned correctly.	Position the burner parts correctly.
After ignition the flame goes out.	The knob was not pressed long enough or was pressed too gently.	Keep the knob pressed longer, before releasing it, press strongly.
The grill in the burner area has changed color.	A natural phenomenon due to the high temperature.	Clean the grill with metal cleaning detergent.
Electrical operation is generally disturbed.	Igniter or terminal block damaged.	Check the ignition and / or the terminal block and replace it if it is damaged.
The electric ignition no longer works.	Food or detergent residues between the ignition electrode and the burner.	Clean carefully between the ignition electrode and the burner.
The burner lids are dirty.	Normal dirt.	Clean the lids with metal cleaning detergent.

If the problem persists despite observing the instructions above, call the authorised after-sales service.

iWarranty

REGISTER YOUR WARRANTY ONLINE NOW

GO TO: ilve.com.au > support > product registration

As a part of our continued customer service offering, you can now register your ILVE products online at ilve.com.au > support > product registration

Just follow our simple online registration process.

Please ensure that you always keep your proof of purchase in order for your warranty to remain valid should you ever need to use it.

As always, you can contact us on
1300 856 411

WARRANTY

Eurolinx Pty Limited A.B.N. 50 001 473 347 trading as ILVE ("ILVE")

Office:

48-50 Moore Street, Leichhardt N.S.W 2040

Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 856 411

WARRANTY REGISTRATION

Your ongoing satisfaction with your ILVE product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the ILVE product purchased by you. Alternatively, you can now register your warranty online at <http://support.eurolinx.com.au/>

PRIVACY

ILVE respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the ILVE Privacy Policy is available at www.ilve.com.au. ILVE will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any ILVE related company;
3. any service provider which provide services to ILVE or assist ILVE in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is to keep a record of the ILVE product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your ILVE product. ILVE may contact you at any one or more of the addresses, email addresses or telephone numbers set out in the Warranty Registration Card. Please contact ILVE on 1300 694 583 should you not wish to be contacted by ILVE.

WARRANTY

1. Warranty

ILVE warrants that each ILVE product will remain, for a period of twenty four (24) months computed from the date of purchase of the ILVE product, free from defects arising in the manufacture of the ILVE product ("Warranty"). Except for consumer guarantees set out in the Competition and Consumer Act 2010 (Cth) ("Act"), ILVE does not make any further warranties or representations in relation to ILVE products.

2. What is not Covered by the Warranty.

The Warranty does not apply if an ILVE product is defective by a factor other than a defect

arising in the manufacture of the ILVE product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the ILVE product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when ILVE is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of ILVE;
- (g) repair, modification or tampering by the purchaser or any person other than ILVE, an employee of ILVE or an authorised ILVE service contractor*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by ILVE.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the ILVE product handbook provided to the purchaser upon purchase of the ILVE product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the ILVE in respect of an ILVE product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in ILVE products.

3. Domestic Use

Each ILVE product is made for domestic use. This Warranty may not extend to ILVE products used for commercial purposes.

4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

Continued over...

WARRANTY

5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an ILVE product.

6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless ILVE determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to ILVE at the address on the Warranty Registration Card.

7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) ILVE excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the ILVE product) and (other than expressly provided for in these terms and conditions) subject to all terms,

conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of ILVE to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of ILVE to:

(i) replacing or repairing the defective part of the ILVE product;

(ii) paying the cost of replacing or repairing the defective part of the ILVE product;

(iii) replacing the ILVE product; or

(iv) paying the cost of replacing the ILVE product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

8. Defects

Any part of an ILVE product deemed to be defective and replaced by ILVE is the property of ILVE. ILVE reserves the right to inspect and test ILVE products in order to determine the extent of any defect and the validity of a claim under the Warranty.

***For your closest ILVE authorised service agent go to**

<https://support.eurolinx.com.au/#/map/retailers>

All warranty service calls must be booked through ILVE's Customer Care Centre on customercare@eurolinx.com.au or

1300 85 64 11 option 1

01072021

Warranty Card tear off

WARRANTY REGISTRATION CARD
01072021

Please complete and send to ILVE at: REPLY PAID 83617
LEICHHARDT NSW 2040

Last Name:		First Name:
Address:		
State:	Postcode:	Email:
Home Phone:		Mobile:
Purchase Date: / /		(Please attach proof of purchase to validate warranty)

MODEL NUMBER	SERIAL NUMBER (if you cannot locate the serial number please call ILVE on 1300 85 64 11)
1	
2	
3	
4	

01072021



10/55 Howe St
Osborne Park, WA

1/42 Cavendish Rd
Coorparoo, QLD

48-50 Moore St
Leichhardt, NSW

NATIONAL SERVICE CENTRE

Our high quality appliances are designed and manufactured to give you many years of cooking pleasure.

Should you have any questions or issues with your appliance please email our national service centre customercare@eurolinx.com.au or phone us on **1300 85 64 11**.

Our experienced staff are on hand to log your service request and ensure any matter is attended to promptly.

For after sales enquiries please contact us at customercare@eurolinx.com.au or 1.300 85 64 11 option 1

For spare parts contact us at spares@eurolinx.com.au or 1.300 85 64 11 option 2

Technical support is available to authorised and licensed service providers only by contacting us at tech.support@eurolinx.com.au All other technical enquiries should be directed to customercare@eurolinx.com.au



FOLLOW US ON:



facebook.com/ILVEappliances



instagram.com/ILVE_appliances



youtube.com/ILVEappliances

BLOG livewithilve.com

Australia National Telephone Number 1300 MYILVE (694 583) New Zealand Telephone Number 64 3 344 5913

ILVE showroom hours: Tuesday to Friday - 9am-5pm, Saturday - 10am-4pm, Sunday and Monday - closed

*** Melbourne showroom hours:** Tuesday to Saturday - 10am-4pm

ilve.com.au

NSW & ACT (Head Office)
48-50 Moore Street
Leichhardt
F 02 8569 4699

QLD
1/42 Cavendish Road
Coorparoo
F 07 3397 0850

WA & NT
Unit 10/55 Howe Street
Osborne Park
F 08 9201 9188

New Zealand
PO Box 11.160
Sockburn Christchurch
F 03 344 5906