

FR GUIDE D'INSTALLATION & D'UTILISATION
EN INSTRUCTIONS FOR USE
PL INSTRUKCJA OBSŁUGI
RU РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

Brandt

Lave-Linge
Washing machine
Pralka
Стиральная машина



FR Page 3

Dans le souci d'une amélioration constante de nos produits, nous nous réservons le droit d'apporter à leurs caractéristiques techniques, fonctionnelles ou esthétiques toutes modifications liées à leur évolution.

Important :

Avant de mettre votre appareil en route, veuillez lire attentivement ce guide d'installation et d'utilisation afin de vous familiariser plus rapidement avec son fonctionnement

EN Page 15

As part of our commitment to constantly improving our products, we reserve the right to make changes to them based on technical advances to their technical and functional features and appearance.

Warning :

Before installing and using your appliance, please carefully read this Guide to Installation and Use, which will allow you to quickly familiarise yourself with its operation.

PL Strona 27

W ramach stałego poprawiania naszych produktów, zastrzegamy sobie prawo do wprowadzania zmian rozwojowych w ich charakterystyce technicznej, funkcjonalnej lub estetyce.

Ważna uwaga:

Przed uruchomieniem urządzenia, należy uważnie przeczytać instrukcję instalacji i obsługi, aby zapoznać się jak najszybciej z jego działaniem.

RU Стр. 39

В целях постоянного совершенствования наших изделий мы оставляем за собой право вносить любые изменения в характеристики изделий и в их функциональные или эстетические свойства.

Внимание:

Прежде чем включить Ваше устройство, внимательно прочитайте данное руководство по установке и эксплуатации изделия для быстрого ознакомления с его работой.

• CONTENTS

	Page	Page	
Removing the transport packing	16	Programming	18
Moving your machine	16	Children's safety system	22
Connecting to the cold water supply	16	Details of the programmes and options	22
Draining away the waste water	16	Modifying a washing programme	23
Connecting to the electricity supply	17	Automatic safety systems	23
Installing your machine	17	Cleaning the pump filter	24
Loading your washing	17	Maintaining your machine	24
Loading the washing products	17	Incidents that may arise	25
		Messages shown on the display	25

Dear Customer,

You have just acquired a **BRANDT** washing machine and we would like to thank you.

We have invested all our dedication and know-how in this appliance so that it would best meet your needs. With innovation and performance, we designed it to be always easy to use.

In the **BRANDT** product range, you will also find a wide choice of ovens, microwaves, cooking hobs, ventilation hoods, cookers, dishwashers, driers, fridges and freezers, that you can coordinate with your new **BRANDT** washing machine.

Visit our website www.brandt.com where you will find all of our products, as well as useful and complementary information.

www.brandt.com

BRANDT

• SAFETY ADVICE



Important :

This machine is only for domestic use and is designed to wash, rinse and spin machine-washable textiles.

You must observe the following instructions. We refuse to accept any liability and the guarantee if you do not observe these recommendations since this could result in damage to equipment or physical injury.

– The machine must only be used in accordance with its normal method of operation in order to avoid damaging your washing and your machine. Only use washing and maintenance products certified for use in domestic washing machines.

– If you pre-treat your washing with stain removers, solvents or, in general, any inflammable or potentially highly explosive product, do not insert them into the machine immediately.

Furthermore, you are also recommended not to use solvents or products in aerosol cans near to your washing machine or any electrical appliance in general in a poorly ventilated room (risk of fire and explosion).

– If any incidents occur and you cannot resolve them using the remedies we recommend (see the section "INCIDENTS THAT MAY ARISE"), call in a qualified professional.

– If you have to open your machine during a cycle (for example, to add or remove washing), depending on the stage the programme is at (during washing essentially), be careful of the temperature inside the machine, which may be very high (risk of severe burns).

– When making a new installation, the machine must be connected to the water supply with a new hose: the old hose must not be re-used.

– Do not let children play with the machine and keep your pets away from it.

– You must immediately make any obsolete machine unusable. Disconnect and cut off the power cable flush with the machine. Close the water tap and remove the hose. Disable the door lock.

– If there is a risk of frost, disconnect the water hose and drain off any water that may remain in the drain hose by placing this as low as possible in a bowl.

• SAVING ENERGY

– Only programme a prewash when it is absolutely necessary: for example, for very dirty sports or working clothes, etc.

– A low temperature programme is sufficient for impeccable washing results when your washing is only slightly or moderately dirty.

– For washing that is only slightly dirty, select a short washing cycle ("Rapid", "Express" or "Flash", depending on the model).

– Use the right amount of washing products for the hardness of the water, the amount of washing and how dirty it is and follow the instructions on the detergent packs.

• ENVIRONMENTAL PROTECTION

This appliance's packaging material is recyclable. Help recycle it and protect the environment by dropping it off in the municipal receptacles provided for this purpose.





Your appliance also contains a great amount of recyclable material. It is marked with this label to indicate the used appliances that should not be mixed with other waste.

■ This way, the appliance recycling organised by your manufacturer will be done under the best possible conditions, in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment. Contact your town hall or your retailer for the used appliance collection points closest to your home.

We thank you doing your part to protect the environment.

• DESCRIPTION OF YOUR MACHINE

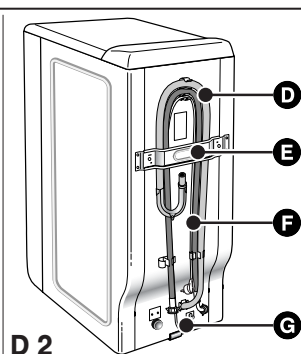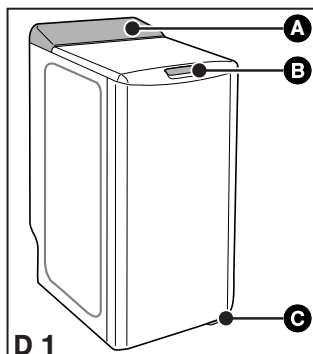

- A** Control panel
- B** Handle for opening the lid (remains locked during the cycle)
- C** Lever for raising the machine on castors (depending on the model)
- D** Drain hose
- E** Cross clamp
- F** Water supply hose (not connected)
- G** Power supply cable

• REMOVING THE TRANSPORT CLAMPS

⚠ Important :

Before using the machine in any way, you must first perform the following operations.

These comprise removing all the components designed to immobilise the drum in your machine during transport.

These so-called “releasing” operations are necessary for your machine to operate correctly and to conform to the prevailing safety standards. If they are not carried out completely, this could cause severe damage to your machine while it is operating.

– Remove the washing machine from its plinth (check that the wedge **A** supporting the motor is not still inserted in the machine) (Diagram D3)

– Remove the 4 screws **B** with a screwdriver (Diagram D4)

– Remove the cross clamp **C** by removing the 2 screws **D** (Diagram D5) using a 10 or 13mm spanner (depending on the model). (Ensure that you remove the two plastic braces fixed on the cross clamp at the same time as the clamp itself).

– Replace the screws **B** in their initial positions.

⚡ Warning:

You must block off the two holes using the hole covers provided **E** (supplied in the accessories bag) (Diagram D6)

– Remove the drum-tank assembly locking wedge (Diagram D7).

To do this:

- Lift the lid on the machine
- Remove wedge **F**
- Remove wedge **G** by turning it a quarter turn
- Release the drum doors, locked in the lower position, by pressing down on both eaves simultaneously.

⚡ Warning:

Remove the pipe support collars **H** You must block off the holes revealed with the hole covers **I** supplied in the accessories bag (Diagram D8).

🔍 Advice:

We would recommend that you keep all the locking components since these must be refitted if you must subsequently transport your machine again.

🔍 Information:

Your machine has been scrupulously checked before it left the factory. You may therefore notice a little water still remaining in the tank or the products box.

• MOVING YOUR MACHINE

• Mounting it on castors

If your machine is equipped with removable castors, you will be able to move it quite easily.

To mount it on castors, swivel the lever on the bottom of the machine from the right to the far left (Diagram D9).

⚠ Important:

The machine must not rest on the “front” castors while it is operating: remember to return the lever to its initial position.

• CONNECTING TO THE COLD WATER SUPPLY

Connect the supply hose (Diagram D10):

– At one end to the connection on the back of the machine

– On the other end to a tap fitted with a threaded end 20mm dia. x 27 (3/4 BSP).

If you use a self-piercing tap, the useful aperture must have a minimum diameter of 6mm.

Water supply:

- Minimum water pressure: 0.1 MPa or 1 bar

- Maximum water pressure: 1 MPa or 10 bars

• Replacing a water supply hose

When replacing the hose, ensure that the hose is tightly fastened and that there is a seal at both ends.

• DRAINING AWAY THE WASTE WATER

Fit the hose bracket provided inside your machine to the end of the drain hose and then connect the hose (Diagram D11):

– Either, temporarily, over a sink or a bathtub.

– Or permanently to a ventilated U-bend.


If your installation does not have a ventilated U-bend, check that the connection is not sealed. In fact, to avoid any waste water flowing back into the machine, you are strongly recommended to leave an air gap between the machine’s drain hose and the drainpipe.

In any case, the drain hose bracket must be placed at a height of 65 to 90cm higher than the base of the machine.

⚠ Important:

Ensure that the drain hose is tied firmly in place with cord to avoid the bracket coming loose during draining and causing a flood.

The waste water can be drained away to the ground provided that the drain hose passes through a point 65 to 90cm higher than the base of the machine (Diagram D12).

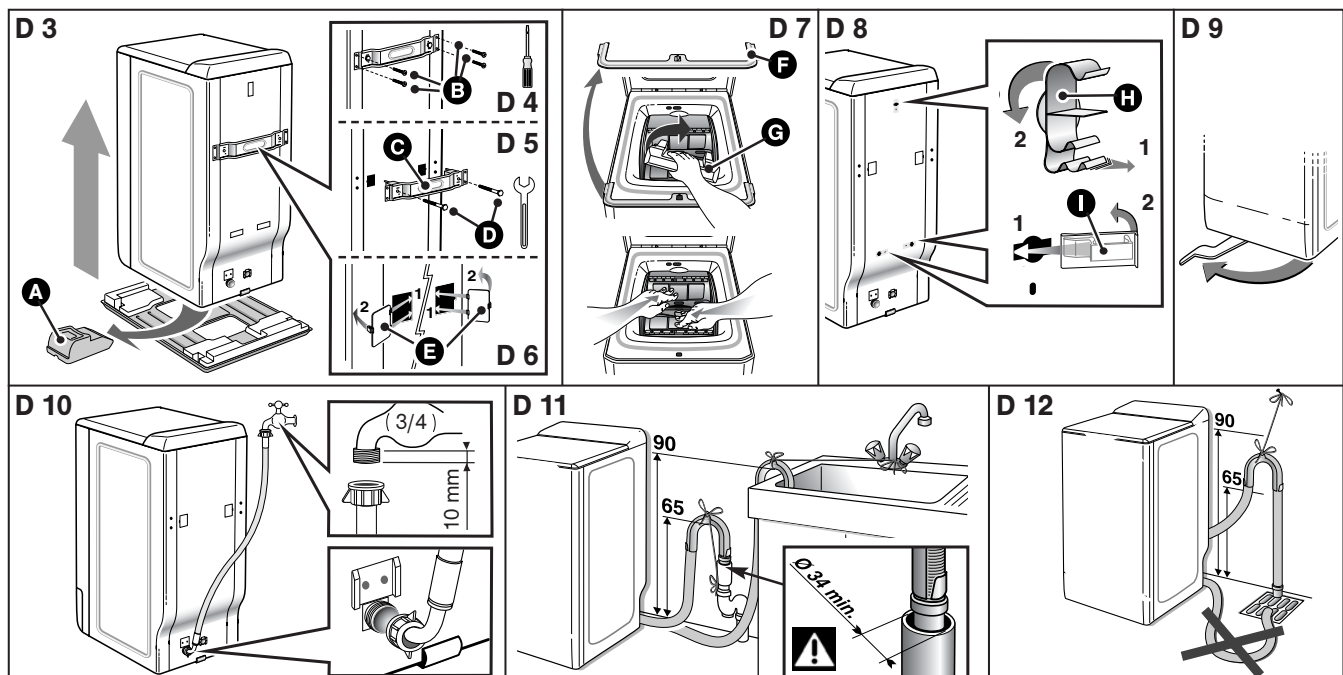

• CONNECTING TO THE ELECTRICITY SUPPLY



Important:

For your safety, you must comply with the instructions below.

– Before connecting your machine, you must ensure that your installation's electrical characteristics match those of your machine (see the details provided on the information plate affixed to the back of the machine).

The electrical installation must comply with the prevailing standards and the Electricity Board's regulations in the country concerned, **particularly as regards Earthing** and installation in shower rooms.

We cannot be held responsible for any incident caused by the machine being incorrectly earthed.



Advice:

Advice on the electrical installation of your machine

- Do not use an extension lead, adapter or multiple socket.
 - **Never** cut out the Earth wire.
 - The socket must be readily accessible but out of the reach of children.
- If in any doubt, please contact your installer.**



Important:

Your machine conforms to European Directives EEC/73/23 (Low Voltage Directive) and EEC/89/336 (Electromagnetic Compatibility) as modified by Directive EEC/93/68..

• INSTALLING YOUR MACHINE



Important:

If you are installing your machine next to another machine or a unit, we recommend that you leave a gap between them to allow for air circulation.



Advice:

We also strongly recommend that you do NOT:

- Install your machine in a damp, poorly ventilated room.
 - Install your machine in an area where it could be subject to water splashes.
 - Install your machine on a carpeted floor.
- If you cannot avoid doing this, please take every precaution to avoid blocking air circulation at the bottom of the machine in order to ensure that the internal components are well ventilated.

• Levelling the machine:

Use a spirit level to check that the floor is horizontal: maximum slope 2°, i.e. a discrepancy of approximately 1cm over the width and of 1.5cm over the depth of the machine.

• Adjustable feet

Some machines are fitted with two adjustable feet at the front to enable you to compensate for any unevenness in the floor. Proceed as follows to adjust the feet to level and stabilize your machine:

- Set the machine on its castors (or tilt it slightly backwards if it does not have retractable castors)
- Screw in or unscrew the feet to adjust the height to suit the shape of the floor (Diagram D13)
- Set the machine back on its feet and check that it is stable.

• TEXTILE MAINTENANCE CODES

- **Washing** : Never exceed the indicated temperatures
- **Use of cold diluted bleach possible:**
- **Iron:** Low Medium High
- **Dry clean:** mineral spirit perchlorethylene all solvents
- **NB: A crossed-out code indicates that it is forbidden**

• LOADING YOUR WASHING

Perform these actions in the following order:

• Open the machine

- Check that the Programme selector is correctly positioned on “Off”.
- Depending on the model, lift the opening handle or press the push button on the front of the machine.

The lid will open.

- Open the drum by pressing the button on the front door.

• Insert your washing

For optimum washing performance, place your washing, preferably sorted and folded, in the drum, distributing it evenly without heaping it up. Mix large and small items to obtain an optimum, well-balanced spin.

• Close the drum

Ensure that the drum is correctly closed.



Important:

Check that the three hooks and the border of the button are fully visible.

• LOADING THE WASHING PRODUCTS



Important:

(Diagram D14)

- The “WASH” container may contain powder or liquid but liquid detergent should not be used for programmes WITH Prewash and/or WITH “Delayed Start” (depending on the model).
- Concentrated softener should be diluted with warm water.
- Concentrated bleach must be diluted.
- To fill the product containers correctly, place the lid fully open.
- Do not exceed the MAX level.

• Dispensing the detergent

The amount of detergent to be used depends on the hardness of the water, the extent to which your washing is soiled and the amount of washing to be washed.

Please refer to the dosing instructions on your pack of detergent.

Warning: in most cases, the detergent manufacturer's recommendations apply to the drum filled to the maximum. Adjust the dosage correctly to the weight of the washing you have placed in the machine.

These recommendations will help you to avoid using too much detergent, which causes foam to be produced. Too much foam can reduce your machine's performance and increase the length of the washing cycle and the consumption of water.

• Detergents for woollens and delicate fabrics

You are recommended to use an appropriate detergent for washing these fabrics (avoid placing such detergents directly on the drum because they have an aggressive action on the metal).



• Before your first wash

Before making your first wash, we recommend that you carry out a “COTTON 90 wash without pre-wash” and with no washing in the drum, using a 1/2 measure of your usual detergent in order to eliminate any residues from manufacturing that may remain in your machine.

• STANDARD COMPARISON TESTING PROGRAMME

Cotton 60°C - 5 kg - no options – max spin.


To comply with the statement on the label, the tests are conducted in accordance with European Directive 92/75/EEC at nominal capacity, ensuring complete use of the CEI detergent from the start of the washing phase.

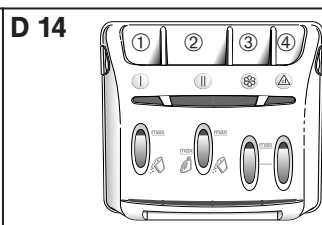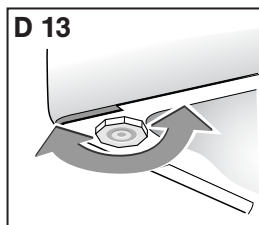

- ① | Pre-wash container (powder)
- ② || Wash container (powder or liquid)
- ③ Softener
- ④ Bleach

: POWDERED DETERGENT : LIQUID DETERGENT

• DESCRIPTION OF THE CONTROL PANEL AND THE LCD SCREEN

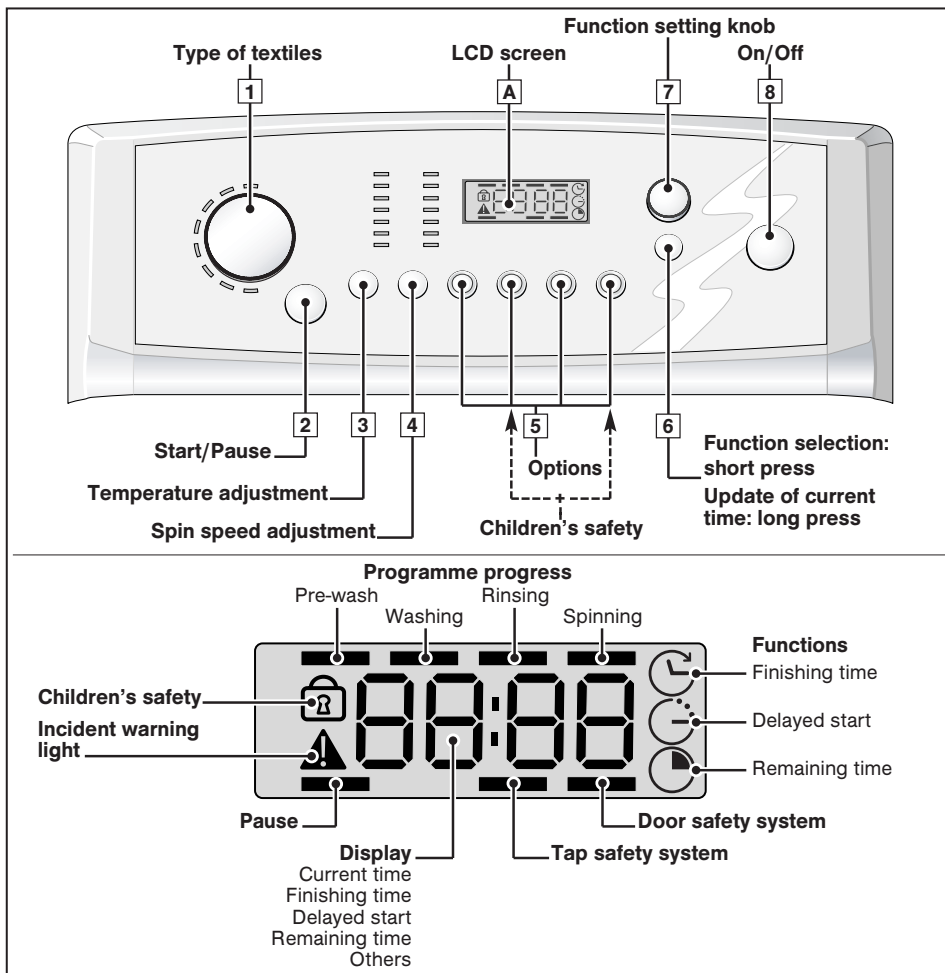

• USE

Advice:
 Familiarise yourself with the operation of the buttons, the knobs and the screen.
 Programme the current time when you first switch on or after a power failure.
 Set your programme after you have put your washing in the machine.

• OPERATION OF THE CONTROLS

- All the buttons are micro-switches and do not remain depressed.
- The "Time modes" button [6] should be pressed only briefly each time except when updating the current time, in which case it should be kept held down.
- (*) Details of this function in the following pages.
- The adjustment knob [7] rotates. Once you have selected a particular function, it is used to modify the parameters. Turning it in a clockwise direction increases the values displayed; turning it counter-clockwise reduces the values.

• Confirm/Pause:

- The "Start/Pause" button [2] is used to confirm the program you have chosen and temporarily to stop a cycle while it is running.


 
• Cancel:

- You can cancel your selections at any time by pressing the "On/Off" button [8].

• DETAILS OF THE VARIOUS DISPLAYS ON THE LCD SCREEN

- **Current Time (no function symbol displayed)**
 This function enables you to set your washing machine's clock. You must do this to be able to use the "Finishing Time" Function.
- **Finishing Time**
 This function shows the time when your cycle will finish. It also enables you to delay the cycle finishing time, for example to avoid:
 - The wet washing having to wait in the drum until you return.
 - The final spin taking place during the night...
- **Delayed Start**
 This function enables you to program a washing cycle to start at the time you wish, for example:
 - To distribute consumption of electricity between appliances,
 - To make optimum use of the off-peak hours offered by your electricity provider.
- **Remaining Cycle Time**
 This function tells you the length of your programme while programming and the time remaining before the cycle finishes while it is running.
- **Other Displays**
 The LCD screen also displays other messages for your information or assistance. You will discover what these mean on the following pages.
- **Display indicating the waiting period before the cycle actually starts:**
 If you have chosen to delay your washing cycle (either by selecting a later finishing time or by delay the start), the 4 segments in the upper section run from left to right and then from right to left throughout the whole period from when you confirm your programming to the time the cycle actually starts.

Display

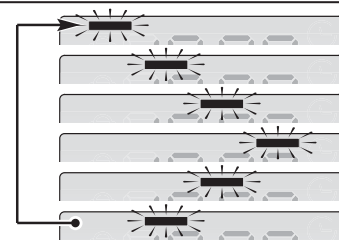


• **DETAILS OF THE VARIOUS DISPLAYS ON THE LCD SCREEN (continued)**

Display


• **Programme Progress:**

The 4 segments in the upper section appear in succession to show the phase the washing cycle is in:
 – During the whole pre-wash,
 – During the whole wash,
 – During the whole rinse
 – During the whole spin

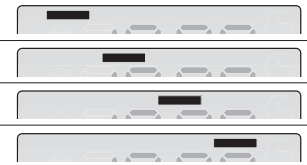


• **Tap Safety System:**

 A message is displayed when the water tap is closed or when there is no more water being supplied to your washing machine. Please refer to section "INCIDENTS INDICATED, WHICH YOU CAN RECTIFY YOURSELF".



• **Door Safety System:**

 A message is displayed when your washing machine's lid is poorly closed. Please refer to section "INCIDENTS INDICATED, WHICH YOU CAN RECTIFY YOURSELF".



• **Children's Safety System:**

You can protect your programming by locking it. Please refer to the section "CHILDREN'S SAFETY SYSTEM".



Information:

All the displays shown in these instructions are provided only as examples. The actual displays can vary depending on the model, the selected programme and the programming time.

Important:

Before switching on your machine, check that the power cable is plugged in and that the water tap is open. Also ensure that the drum doors and the machine's lid are shut correctly.

• **ACTIVE MEMORY FUNCTION**

Your washing machine memorises your washing habits. Every time you start a programme, it records the temperature, the speed and the options you generally use and suggests these when you switch on.

Important:

When you start your machine for the first time, it proposes the manufacturer's recommended programme but it will learn your habits after a few cycles.

• **SETTING THE CURRENT TIME**

• **General:**

Information:

Setting the current time is only compulsory when using the "Finishing Time" function: the "Delayed Start" and "Remaining Time" functions do not require the clock to be set.

You can programme the current time at any time.

– When you switch on for the first time or if the power supply has been interrupted (a power failure or the power cable has been unplugged, etc.) the "Finishing Time" flashes when this function is selected (for how to select this function, see the section "SETTING THE FUNCTIONS").

• **Programming the current time:**

- Switch your washing machine on by pressing the "On/Off" button **8**.
- Hold the button **6** **A** down until the "Current Time" function flashes.
- Briefly press the button **6** **B**, the hours flash without the minutes. Set the hour by turning the knob **7** **C** (this is set hour by hour over 24 hours).
- Briefly press the button **6** **D**, the minutes flash. Set the minutes using the knob **7** **E** (these are set minute by minute over one hour).
- Press the button **6** **F** briefly to record your setting.

When the clock setting is confirmed, the current time stays fixed for a very short period **G** and then the "Finishing Time" function is displayed **H**. Your machine is now ready to use this function.

• **Changing "Summer Time / Winter Time":**


– Proceed in the same way as above.

• **Power failure during a cycle:**

– When the power is restored, the program continues its normal course. If you had programmed a "Finishing Time" , this flashes.

Important:

If there is a power failure during a cycle, the "Current Time" is cut off throughout the interruption. If you want to use the "Finishing Time" function again, you must reprogramme the current time.

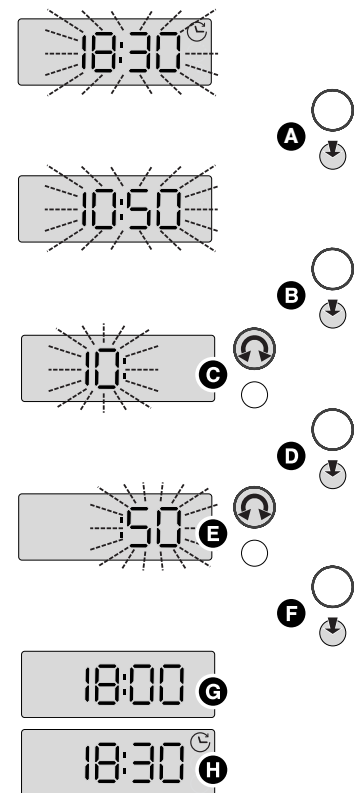


• **SETTING THE FUNCTIONS**

• **Setting the “Finishing Time”:**

! Important:

Before you can use the “Finishing Time” function, you must first have set the “Current Time” on the clock.

– Press the “On/Off” button to switch on your machine.

– If the “Finishing Time”  is not already shown on the screen, press button **6** to select this function.

NB: The time displayed on the screen represents the current time plus the duration of the selected programme; you therefore cannot advance this.

– On the other hand, you can delay the time using button **7** (the setting is made in 15-minute periods based on 24 hours).

NB: The “Finishing Time” remains fixed until the end of the programme.


Information:

Certain occurrences during operation (for example: detection of imbalance, foam, etc.) can cause the cycle’s duration to vary. In this case, the “Finishing Time” is updated automatically.

Display




 
• **Setting a “Delayed Start”:**

– If you prefer to delay the cycle by delaying the starting time, use button **6** to select the “Delayed Start” function .



– Use button **7** to set the delayed start’s duration (this is set hour by hour, from 1 to 24 hours).

NB: For a “Delayed Start” of more than 1 hour, the countdown is hour by hour up to 1 hour and then minute by minute.

When the countdown is complete (when the cycle actually starts), the “Time Remaining” function  is displayed.



• **Displaying “Time Remaining”:**

– If you are in “Finishing Time” mode  and wish to see “Time Remaining”  displayed, simply use button **6** to select this function.

This provides:

 
– During the cycle, the time remaining before the end of the cycle.

– During the waiting period before the cycle starts, the time remaining before the cycle actually starts (rounded to the next hour).

– “Time remaining” is also displayed, without any action on your part:

– As soon as you start the washing machine, unless you were in “Finishing Time” mode during the previous cycle.

– At the end of a “Delayed Start”, as soon as the cycle actually starts.



• **Selecting the type of textiles:**

To select the type of textiles or a particular programme (Rinse, Spin, etc.), turn the knob **1** until the indicator light for the desired programme lights up (for more details, please refer to the section “PROGRAMME DETAILS”).



• **Setting the temperature:**

When you have selected the type of textiles or a particular programme, your washing machine proposes the most suitable washing temperature for the programme.

You can alter the suggested temperature by repeatedly pressing button **3** briefly.

• **Setting the end of the cycle (spinning, draining, etc):**

Your washing machine similarly automatically proposes the maximum authorised spin speed for the selected programme.

By pressing briefly each time on button **4**:


– Either select a different spin speed **A**

– Or drip dry **B**.

The cycle will end with a gentle spin at 100 rpm.

– Or select stopping with the tub full **C**.

Your machine will stop with the tub full of water before the final spin.

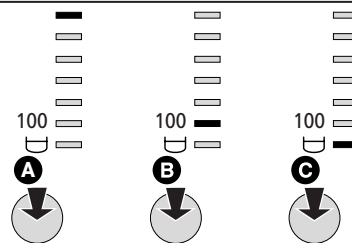

• **Selecting the options:**

To select the options, press one or more of the “Options” buttons **5** (for more details, please refer to the section “DETAILS OF THE OPTIONS”).



Information:


For each of the above, the machine only proposes the values or options compatible with the selected programme.

• PROGRAMMING

• Programming a washing cycle:

	Display
– Press the “On/Off” button [8].	The indicator lights for the programme, the temperature, drying and the options most often used are lit, plus, on the screen: The “Finishing Time” ⌚ or the “Remaining Time” ⌚ for the suggested programme.
– If the suggested programme does not suit you, turn the knob [1] to select a new washing programme. – If you wish: – Alter the temperature using button [3]. – Alter the spin speed (new spin speed, drain or stop with tub full) using button [4]. – Or select one or more options using the relevant buttons [5].	The indicator lights for the programme, the temperature, the end of the cycle and the options selected, plus, on the screen: The “Finishing Time” ⌚ or the duration of the selected cycle (“Time Remaining” ⌚)
– Choose an immediate start by pressing the “Start/Pause” button [2] →...	The cycle progress segment is permanently lit and the “Finishing Time” or a countdown of the time remaining before the cycle ends
– ... Or choose to delay your cycle: – Either by specifying the desired time for the cycle to end in “Finishing Time” mode ⌚ – Or by delaying the start of your cycle by switching to “Delayed Start” mode ⌚ (see how to proceed in the section “SETTING THE FUNCTIONS”). NB: Even if you forget to press the “Start/Pause” button → after programming a washing cycle preceded by a “Delayed Start” or a “Finishing Time”, your choice will still be accepted after a few seconds.	Rapid run through of the 4 cycle progress segments and, depending on the case, display of the programmed finishing time or the time remaining before the cycle actually starts.


• Adding or removing an item during the cycle (impossible during spinning):

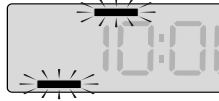– Press the “Start/Pause” [2] button to interrupt the cycle. The “Pause” segment flashes, as well as the cycle progress segment lit at the time this option was selected, whether the display is in “Finishing Time” or “Remaining Time” operation. – Add or remove the item or items *. – Press the “Start/Pause” [2] button to continue the cycle. (*) It may take 1 or 2 minutes for the lid to unlock NB: If you have selected a delayed washing cycle (in “Finishing Time” or “Delayed Start” mode), you can access the drum immediately at any time during the phase before the washing cycle starts without having to interrupt and restart the cycle.	
--	---

• Cancelling while programming or washing or during a pause:

– Press the “On/Off” button [8]. This operation can be performed during programming, during the waiting period before the cycle actually starts and throughout the whole washing cycle. It also cancels the “Children’s Safety” system. NB: Cancellation requires you, in all the cases, to reprogramme everything from the start. If you have cancelled during washing, remember to drain away the water if necessary.	
--	--

• End of the cycle:

NB: After spinning, your washing machine automatically positions the drum opening at the top to provide easy access to the washing. This operation lasts at most 3 minutes. – Then, the screen shows “Stop”, indicating the end of the cycle. Press on the “On/Off” button [8]. You can now open the lid and remove your washing.	
---	---

• Maintaining your machine’s performance (Maintaining the pump filter):

You must clean the drain pump filter regularly (for how to do this, see the section “CLEANING THE PUMP FILTER”).

! Important :
Your machine’s performance can be affected if you do not clean the pump filter regularly.

For more details on the various functions, please refer to the sections “PROGRAMME DETAILS” and “DETAILS OF THE OPTIONS”.

! Important:
In the “End of Cycle” phase, when “Stop” is displayed, if one of the buttons [2], [3], [4] or [5] is pressed this is not taken in account but returns you to “Programming” mode.
We recommend, as a safety measure, that, at the end of a cycle, you turn off the water tap and unplug the power cable (When you plug the cable in again, remember to reprogramme the “Current Time”).

• SOME EXAMPLES OF PROGRAMMES

To select the most suitable programme for your type of washing, follow the instructions on the labels that most textiles bear.

Programmes table								100	D
Type of textile		Temperature (°C)	Max. load (kg)	Prewash	Intensive	Rinse plus	Easy ironing	Drip-dry	Full drum stop
	COTTON / WHITES	30° - 90°	5,0	●	●	●	●	●	●
	COLOUREDS / SYNTHETICS	30° - 60°	2,5	●	●	●	●	●	●
	WOOLLENS	❄ - 30°	1,5			●		●	●
Special programmes									
	OPTIMA 45 MIN	40°	3,0			●		●	●
	HAND WASH	❄	1,0			●		●	●
	FLASH 30'	40°	2,5					●	●
Additional programmes									
	RINSE only		-					●	●
	SPIN only		-					●	

● : These functions can be used alone or in combinations: **no illogical combinations can be made.**

• CHILDREN'S SAFETY SYSTEM

– To protect your programming, activate the “Children’s Safety” system by simultaneously pressing the 2nd and 4th option buttons . When this safety system is active, the symbol is displayed.

– To deactivate the “Children’s Safety” system, press both buttons again simultaneously.

NB: You can activate or deactivate the “Children’s Safety” system at any time.

Of course, we recommend that you only activate it after you have programmed and started the cycle.

Display



• DETAILS OF THE PROGRAMMES

The main programmes provided by the machine are as follows:

• Cottons/Whites

For a wash load consisting of hard-wearing white or coloured COTTON textiles.

Important :

When washing coloureds do not exceed a maximum temperature of 60°C.

NB : During the first few minutes of the programme, your machine automatically evaluates the washing load you have introduced and adapts the water consumption and the length of the programme accordingly to provide a perfect wash

• OPTIMA 45 MIN

This 40°C programme enables you to wash a usual 3kg load of cottons and mixed textiles in 45 minutes while ensuring perfect washing results and maximum energy savings.

• Coloureds/Synthetics

For a wash load consisting of DELICATE COLOURS, HARD-WEARING SYNTHETICS or MIXED FIBRES.

• Woollens

For a wash load consisting of NET CURTAINS, DELICATE TEXTILES, FRAGILE ITEMS or “MACHINE-WASHABLE” WOOLLENS

NB: A programme with appropriate agitation and spin rates for these types of textiles.

• Hand wash

If your washing comprises SILK or PARTICULARLY DELICATE FABRICS

NB : A programme with a very gentle mechanical action and no intermediate spins between rinses.

The cycle ends with a very gentle, progressive spin restricted to 600 rpm.

• Flash 30'

This programme enables you to refresh a small load of 2.5 kg of lightly soiled washing composed of WHITES, COTTONS, COLOUREDS or HARD-WEARING SYNTHETICS.

The cycle time is restricted to around 30 minutes

In this programme, the washing temperature is automatically programmed at 40°C.

Important :

For this programme, the doses of detergent should be reduced by half.

• Rinse only

A separate rinse followed by a choice of:

- Either spin and drain
- Or drain only (“Drip-dry” option)
- Or a stop with the drum full of water.

• Spin only

This allows a separate spin and drain.

Important :

In the case of “Rinse only” followed by a spin or “Spin only”, ensure that you select a suitable spin speed for the type of washing in the machine.

• DETAILS OF THE OPTIONS

• Prewash

Specially designed for heavily soiled washing (mud, blood, etc.). A specific initial agitation in cold water precedes a phase of heating to 30°C.

This agitation phase in cold water enables the particles soiling the washing to be removed before the water is heated.

Important:  **Detergent must be placed in the "I" container in the products box.**

• Intensive

This function enables you to handle so-called 'difficult' stubborn stains.

• Rinse plus

"Especially for sensitive and allergic skin": adds an extra rinse to the washing cycle.

• Easy Ironing


This avoids the washing creasing and makes it easier to iron.

• Full drum stop

This function enables you to remove the washing from your machine before the spin phase or to delay this phase with you washing remaining in water to prevent creasing.


NB: When the machine is stopped with the tub full of water, there are two possibilities:

– If you are in "Finishing Time" mode, the screen shows the "Current Time" and flashes alternately between the "Pause" segment and the 4th cycle progress segment respectively.

– If you are in "Remaining Time" mode, the screen shows "0.00" and flashes alternately between the "Pause" segment and the 4th cycle progress segment followed by the "Remaining Time" symbol  respectively.

 
Then:


– **Either you want to drain after spinning.**

In this case, use the knob  to choose a suitable spin speed for your type of washing.

The programme will end automatically.



– **Or you just want to drain.**

In this case, use the knob  to select the "Drip Dry" function (indicator light "100").

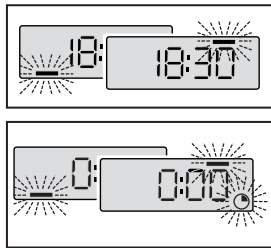

• MODIFYING A WASHING PROGRAMME

  • During programming:

Everything can be altered before the "Start/Pause" button   is pressed.

Information:

Audible aid:

When you make alterations during the washing cycle of washing, your washing machine emits:

– A "Beep" for every authorised modification

– A "Beep Beep" for every unauthorised modification. In this case, select another programme.

We provide below the main programme alterations you can make.

• Throughout the cycle:

Depending on your model, the following changes are possible without pressing the "Start/Pause" button  .

– You can change the temperature for the same type of textile.

NB: If the temperature achieved by the washing cycle is higher than your new selection, heating the water stops immediately and the cycle continues.

– You can alter the spin speed throughout the cycle.


– You can select "Drip Dry" and "Full Drum Stop" throughout the washing phase..

– You can activate the "Extra Rinse" option until rinsing starts (until the 3rd cycle progress segment is displayed).

– You can deactivate all the options throughout the cycle provided that their action has not already finished.

 
• During the period before the cycle actually starts (if you have chosen to delay the time your washing starts):

– Any kind of programme modification is accepted during the waiting period.

– You can alter the length of the delayed start or the "Finishing Time" throughout the waiting period before the cycle actually starts. To do this, turn the adjustment knob  to a new value.

NB:

– During this period, selecting a new value cancels out the previous selection. The new value is taken as the last selection made.

– If you want to make an immediate start during this period, turn the adjustment knob  to the left until the display locks:

– On the closest finishing time (current time + cycle time), if you are in "Finishing Time" mode



– On "0", if you are in "Delayed Start" mode.






Then, briefly press the "Start/Pause" button  .

The cycle will start immediately.

– You can only activate the "Prewash" and "Easy Ironing" or "Intensive" options during the waiting period for a "Delayed Start" or a "Finishing Time".

• When the cycle is over:

When the screen  shows "Stop", you can programme a new cycle without having to press the "On/Off" button  again.

To do this, all you need to do is to turn the selector  or press one of the following buttons: , ,  or .

The screen returns to the most frequently used configuration.

The machine is then ready to be reprogrammed.



• AUTOMATIC SAFETY SYSTEMS

• Lid opening safety system:

As soon as washing commences, the lid on your machine is locked.

When the cycle is finished or when the machine has stopped with the drum full of water, the lid unlocks.

If you have selected a delayed wash, the lid remains unlocked throughout the waiting period until the cycle actually starts.

If you wish to open the lid during the cycle, press button   briefly and wait 1-2 minutes for the safety system to unlock the lid.

Important:

Depending on when you wish to open the lid during the cycle, this time delay may be a little longer because a cooling down period may also have to be included.

In fact, to avoid your being severely burnt, the lid safety system will not open during the cycle unless the temperature inside the machine is below a certain threshold.

• Water safety system:

During operation, constant control of the water prevents any overflows.

• Spin safety system:

Your washing machine is fitted with a safety system that restricts the spin when poor load distribution is detected.

In this case, your washing may be insufficiently spun. Redistribute your washing in the drum and programme a new spin.

• Anti-foam system:

Your machine can detect when too much foam is being produced during spinning.

At such times, spinning stops and the machine drains.

The cycle then restarts, adapting the spin rates and possibly adding an extra rinse.

• **CLEANING THE PUMP FILTER (Option 1)**

The way to access your pump filter may differ according to the model of the machine (see options 1 and 2).

This filter collects the small objects you may have inadvertently left in your clothes and prevents them from disrupting the pump's operation.

To clean the filter, proceed as follows:

- Open the drum doors. At the back of the drum, you will see a plastic component **A** (Diagram D15)
- Release this (Diagram D16).

To do this:

- Insert a rod (a pencil or a screwdriver, for example) into the hole in the component **A**
- Press down vertically with the rod, while pushing the component **A** over to the right until it is released from its housing
- Remove the component **A**
- Turn the drum slightly towards the front of the machine, with the doors open (Diagram D17)

You can access the pump filter **B** through the openings freed by removing the plastic component **A**.

- Remove the filter from its housing (Diagram D17)
- Remove the various objects it may have in it
- Rinse it under the tap (Diagram D18)
- Re-insert it, pushing it firmly into its housing after checking that the housing is clean
- Re-insert the plastic component **A**, ensuring that it is positioned correctly in the openings at the bottom of the drum and pushing it to the left until it is fully engaged (Diagram D19).

• **CLEANING THE PUMP FILTER (Option 2)**

if your machine does not have the component **A** shown in Diagram D16, you must proceed as follows to clean your pump filter:

- Turn the drum to position the closed doors facing downwards: this will reveal a plastic component **C** (Diagram D20)
- If your machine is fitted with one, remove the screw **D**
- On certain types of machines, the component has a clip.

In this case, release the component **C** by pressing on this clip **E** while sliding the component **C** gently to the right

- Then, in all cases, turn the drum again, open the doors and remove the component **C** by sliding it in the direction of the arrow (Diagram D21)

- Turn the drum slightly towards the front of the machine, with the doors open (Diagram D22).

You can access the pump filter **F** through the openings freed by removing the plastic component **C**.

- Remove the filter from its housing (Diagram D22)
- Remove the various objects it may have in it
- Rinse it under the tap (Diagram D23)
- Re-insert it, pushing it firmly into its housing after checking that the housing is clean
- Re-insert the plastic component **C** and the screw **D** by performing all the above operations in reverse order.

• **CLEANING THE MACHINE**



Important :

To clean the casing, the control panel and all the plastic parts in general, use a sponge or a soft cloth dampened only with water and liquid soap.

In all cases, do not use:

- Abrasive powders
- Metal or plastic sponges
- Alcohol-based products (alcohol, thinners, etc.)

• **CARE OF THE INTERNAL COMPONENTS**

To ensure better hygiene, we recommend that you:

- Leave the lid open for a short time after washing.
- Clean the plastic and rubber access components to the tank approximately once a month using a slightly chlorinated product. Run a rinsing cycle to remove any residue of this product.
- Run a washing cycle at 90°C at least once a month.

• **CLEANING THE PRODUCTS' BOX**

Clean the products' box regularly.

To do this:

- Press the bosses **G** on each side of the box simultaneously to extract it from its housing (Diagram D24).
- Remove the siphons **H** from the rear of the box **I** and separate the box from its front cover **J** (Diagram D25)
- Rinse everything under the tap (taking care to empty any excess water remaining inside the box).
- Refit all the box' components, ensuring that the box section itself is properly clipped into the cover and then re-insert the complete assembly into its location under the machine's lid.

• **PERIODIC CHECKS**


To avoid any water damage, we recommend that you regularly check the condition of the water and drain hoses. If you notice the slightest cracking, do not hesitate to replace the hoses with identical ones available from the manufacturer or his After-Sales Service. For how to replace the water supply hose, please refer to the section "CONNECTING TO THE COLD WATER SUPPLY"

• **REPLACING THE POWER SUPPLY CABLE**



Warning:

For your safety, the power cable and, depending on the model, the complete electric box and its associated cable must only be replaced by the manufacturer's After-Sales Service or a qualified electrician.

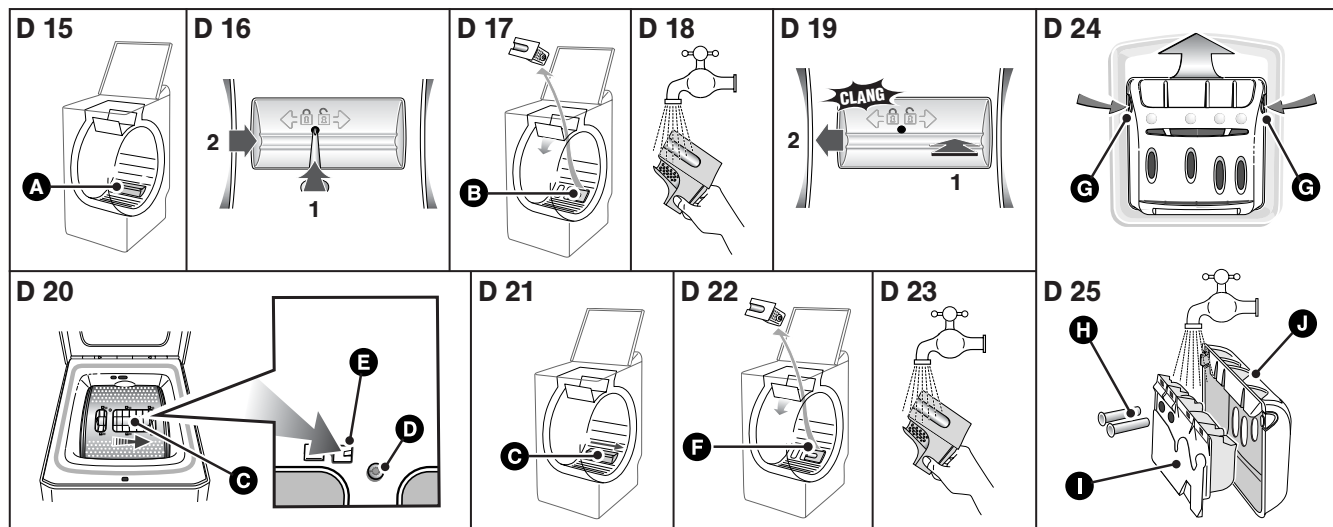

• INCIDENTS THAT MAY OCCUR

• The cycle does not start

- You have not pressed the "Start/Pause" button
- There is no power to the machine:
 - Check that the plug is correctly in the socket
 - Check the circuit breaker and the fuses.
- The water tap is closed
- The machine's lid is not closed properly

• A puddle of water forms around the machine



Warning:

First of all remove the plug and the fuse and shut off the water supply tap.

While the machine is operating, the permanent level control prevents the water from overflowing. If, despite this, water comes out of your machine, it may be that:

- The drain hook is wrongly positioned in the drain pipe.
- The water supply hose is not sealed tightly at the machine or tap end:
 - Check that the seals are in place and the connections are tight.

• Heavy vibration during spin

All the transport materials have not been removed correctly from the machine:

- Check that all the transport wedges have been removed (see "REMOVING THE TRANSPORT CLAMPS FROM YOUR MACHINE").
- The floor is not level.

Your machine is resting on its two "front" castors (depending on the model):

- Reset your machine on its feet by pushing the castor engagement lever to the right.

• The washing is not spun or not spun enough

You have selected a programme with no spin, for example "Drip-dry"

The spin safety system has detected poor distribution of the washing in the drum:

- Untangle the washing and programme a new spin.

• The machine does not drain

- You have programmed "Full drum stop"
- The pump filter is blocked:
 - Clean it (see "CLEANING THE FILTER" for the relevant procedure)
- The drain hose is kinked or squashed

• The lid does not open

The programme has not yet finished
The lid remains locked throughout the programme.

• The drum doors open very slowly (On machines fitted with gently opening doors)

- Your machine has not operated for a long time
- It is located in too cold a position.
- Detergent residue (powder) is blocking the hinges
 - In all cases, everything returns to normal after the doors have opened initially



Important :

As a general rule, whatever the anomaly detected, you should stop the machine, unplug the power cable and shut off the water tap

• MESSAGES SHOWN ON THE DISPLAY

• Incidents indicated, which you can rectify yourself

In this section, we explain how you can rectify these incidents very easily yourself.

Your machine automatically detects some operating incidents and indicates these by particular messages shown on the screen.

Messages	Causes / Remedies
	<p>Tap safety system. When the water tap is still closed:</p> <ul style="list-style-type: none"> - A few minutes after the washing cycle starts: <ul style="list-style-type: none"> - The cycle stops, - The incident warning signal is displayed and the message d01 flashes, - The third segment from the left in the lower section remains constantly lit, - A continuous "Beep" is emitted. - If you have selected a delayed washing cycle, the time counts down until the cycle starts and no signals are issued during this countdown period. - If you see and/or hear these signals: <ul style="list-style-type: none"> - Open the water tap, - Press the "Start/Pause" button to make the signals disappear - The cycle will restart. - This incident may also be caused by the drain hose being poorly connected (see the section "DRAINING AWAY THE WASTE WATER").
	<p>The pump filter is clogged. Clean the pump filter (for how to do this, see the section "CLEANING THE PUMP FILTER") and then press the "Start/Pause" button again to restart the cycle.</p> <p>Also check the drain hose's position in the drain: the connection must not be airtight (see the section "DRAINING AWAY THE WASTE WATER").</p>
	<p>Drain hose not positioned properly. Check the drain hose's position in the drain: the connection must not be airtight (see the section "DRAINING AWAY THE WASTE WATER").</p>
	<p>Drum blocked. Check that a small item of laundry (e.g. a handkerchief or a sock, etc.) has not slipped down between the tub and the drum and is stopping the drum from turning. To access the bottom of the tub, please refer to the section "CLEANING THE PUMP FILTER".</p>
	<p>Door safety system. When your washing machine's door is poorly closed:</p> <ul style="list-style-type: none"> - If you have selected an immediate start or after a pause, <ul style="list-style-type: none"> - The cycle does not start - The incident warning signal and the message d07 flashes, - The fourth segment from the left in the lower section remains constantly lit, - A continuous "Beep" is emitted. - If you have selected a delayed washing cycle and this incident occurs during the waiting period before the cycle starts, the time delay counts down, the cycle starts and then, approximately one minute after the cycle has started, the above signals are emitted. - If you see and/or hear these signals: <ul style="list-style-type: none"> - Close your washing machine's door, - Press the "Start/Pause" button to make the signals disappear - The cycle will restart.

• **MESSAGES SHOWN ON THE DISPLAY (continued)**

• **Incidents indicated that require a breakdown engineer**



Important:

Check that the message displayed is not for an incident you can repair yourself (see previous page).

Your machine also detects some operating faults that systematically require the services of a breakdown engineer and informs you of this through other messages of we provide some examples below.

Messages



When one of these messages is shown, remember to note it down so that you can pass it on to your breakdown engineer when you call him to assist him in his task.

NB:

Before calling your breakdown engineer, we recommend that you do the following:

- Press the "On/Off" button and remove the electrical plug for at least 10 seconds
- Reconnect the plug and restart a washing cycle.

If the fault persists, call your breakdown engineer and remember to tell him which indicator lights were lit.



Important:

Do not restart a washing cycle if the drum remains locked or if you notice water around your machine or if you notice a burning smell.

To keep your appliance in good working order, we recommend that you use **Clearit** household products.



Professional expertise for the general public

Clearit offers you professional products and adapted solutions for the daily upkeep of your household and kitchen appliances.

You may find them in conventional retail outlets, along with a complete line of by-products and consumables.

• **AFTER-SALES SERVICE :**

- Possible maintenance on your washing machine should be undertaken by :
- either your dealer,
 - or another qualified mechanic who is an authorized agent for the brand appliances.

When making an appointment, state the complete reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to the rear of the equipment.

