Gebrauchs- und Montageanleitung

DE **Bedienungsanleitung**

GB **Instructions Booklet**


FR **Mode d'emploi**

IT **Libretto Istruzioni**

NL **Gebruiksaanwijzing**

ES **Manual de instrucciones**

PT **Manual de Instruções**

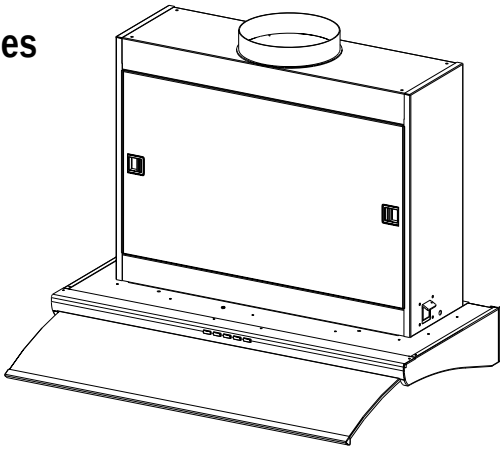

EDIP 6650.0

EDIP 9650.0

Küppersbusch

ALLERFEINSTE KÜCHENTECHNIK

Dear Customer,

If you follow the recommendations contained in this Instruction Manual, your appliance will give you constant high performance and will remain efficient for many years to come.

CONTENTS

RECOMMENDATIONS AND SUGGESTIONS 13

CHARACTERISTICS 14


INSTALLATION 15

USE 17


MAINTENANCE 18

RECOMMENDATIONS AND SUGGESTIONS

INSTALLATION

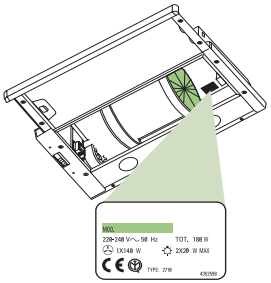


- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm.
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.
- Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air.

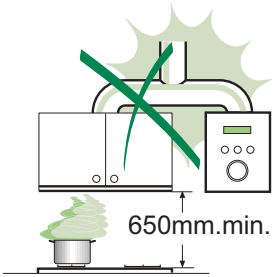

USE

- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has ben designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- The hood should not be used by children or persons not instructed in its correct use.

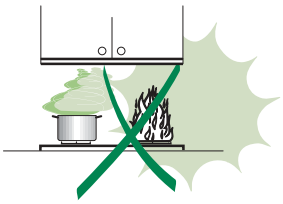



MAINTENANCE

- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period.
- Clean the hood using a damp cloth and a neutral liquid detergent.

CHARACTERISTICS


Dimensions

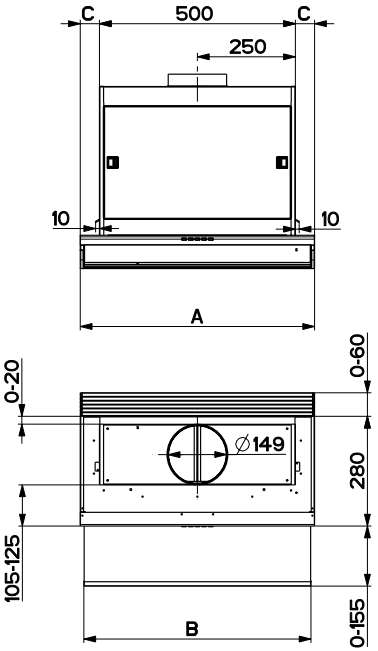

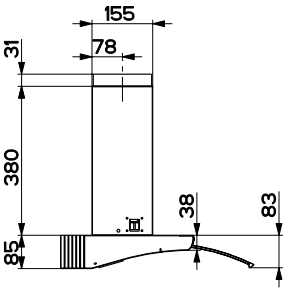

Hood Type	60	90
A	598	898
B	580	880
C	49	200

Components

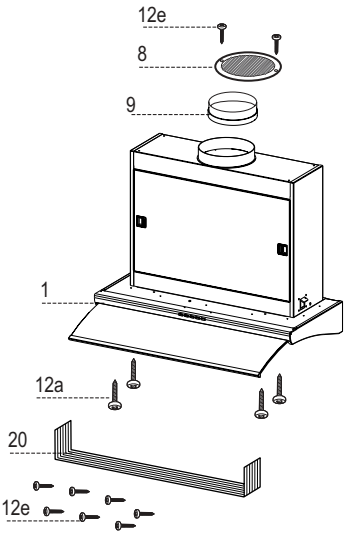


Ref.	Q.ty	Product Components
1	1	Hood Body, complete with: Controls, Light, Blower, Filters
8	1	Directional Air Outlet grille
9	1	Flange ø 150 mm
20	1	Closing element


Ref.	Q.ty	Installation Components
12a	4	Screws 3,5 x 16
12a	9	Screws 2,9 x 12,7


	Q.ty	Documentation
	1	Instruction Manual


Drilling the Support surface and Fitting the Hood


- The Hood can be fitted directly on the lower surface of the Wall Units (650 mm min. above the Cooker Top) using the snap-on Side Supports.
- Make an opening on the lower surface of the Wall Unit, as indicated.
- Insert flange **10** into the top exhaust opening.
- Screw the closing profile **20** onto the rear part of the hood, using the screws **12e** (2.9 x 12.7) provided.
- Open the comfort panel by turning the knobs provided.
- Disconnect the lights connector.
- Disconnect the panel from the hood canopy by sliding the lever out of the fixing pin, simultaneously freeing the other end of the panel from the fixing pin.
- Open the glass panel.
- Remove the metal grease filters one at a time, by turning the hooks provided.
- Close the glass panel again.
- Insert the Hood until the snap-on side supports click into place.
- Lock in position by tightening the screws **Vf** from underneath the Hood.
- If necessary, adjust the whole filter holder unit and proceed as follows:
  - Loosen the four adjustment screws **Vr** and close the glass panel again.
  - Move the entire filter holder unit until it is properly aligned with the wall unit.
  - Keeping the hood canopy still, remove the glass panel and lock the adjustment screws again.
  - The hood can now be fastened to the wall unit using the four screws **12a** (3.5 x 16) provided.
- Replace the metal grease filters.
- Close the glass panel again and hook up the comfort panel.

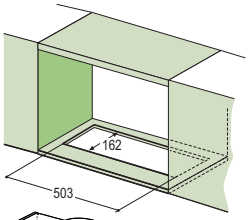


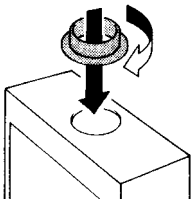


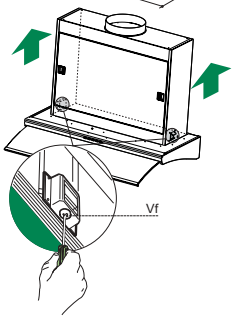

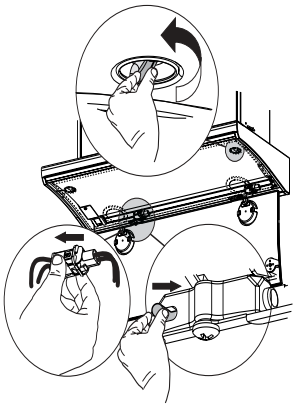

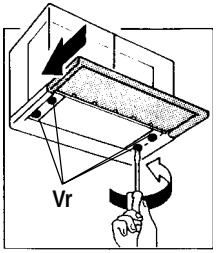

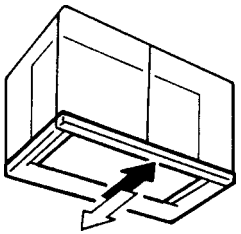


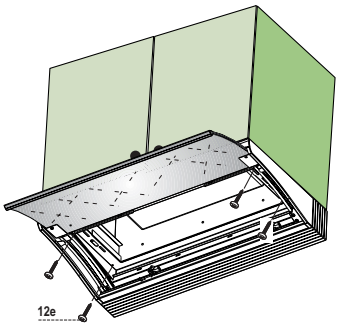

DUCTED VERSION AIR EXHAUST SYSTEM


When installing the ducted version, connect the hood to the chimney using either a flexible or rigid pipe ø 150 mm, the choice of which is left to the installer.

- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove any activated charcoal filters.

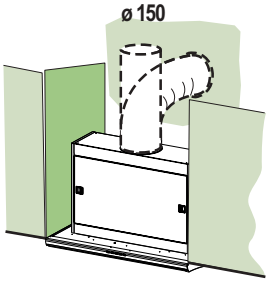

RECIRCULATION VERSION AIR OUTLET


- Cut a hole ø 150 mm in the wall unit over the hood.
- Connect the hood body outlet to the top part of the wall unit using a rigid or flexible pipe ø 150 mm, to be selected by the installer.
- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Fix the directional grille **8** on the recirculation air outlet using the 2 screws **12e** (2,9 x 9,5) provided.
- Ensure that the activated charcoal filters have been inserted.

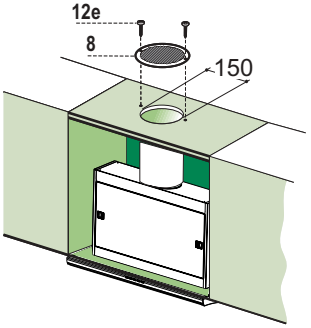

ELECTRICAL CONNECTION

- Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.
- When opening the sliding carriage for the first time after installing the hood, pull it out briskly until it clicks.

Control panel



KEY		LED	FUNCTIONS
L	0/1 Light		Turns lighting on and off.
T1	0/1 Motor	on	First speed. When pressed for about 1 seconds the motor is switched off.
T2	Speed	on	Second speed.
T3	Speed	on	Third speed.
T4	Speed	Fixed	Max. speed
		Flashing	Intensive speed. Suitable for the strongest cooking vapours and odours. The function becomes active when the button is pushed for about 2 seconds. After 10 minutes of functioning it turns off automatically. This function can be interrupted by means of pressing any of the buttons.


FUNCTION OF THE PULL-OUT GLASS PANEL

With the glass panel inserted the button pad is not enabled, and all functions that were activated previously will be turned off, so that lights and motor cannot be turned on. When the glass panel is pulled out the button pad is enabled, so that all functions are active and any functions that were activated previously will be restored. Example: glass panel pulled out : lights ON and motor ON at speed T2; when the glass panel is pushed back in again all these functions are turned off. When the glass panel is pulled out again, the hood will automatically restore the previous state, that is to say lights ON, motor ON at speed T2. If intensive speed was turned on at the time the glass panel was closed, the hood will not return to intensive speed when the glass panel is extracted, but to the speed set prior to that.

MAINTENANCE

Cleaning the Comfort Panel


- Open the Comfort Panel by turning the knobs provided.
- Disconnect the lights connector.
- Disconnect the panel from the hood canopy by sliding the lever out of the fixing pin, simultaneously freeing the other end of the panel from the fixing pin.
- The comfort panel must never be washed in a dishwasher.
- Clean the outside using a damp cloth and neutral liquid detergent.
- Clean the inside using a damp cloth and neutral detergent; do not use wet cloths or sponges, or jets of water; do not use abrasive substances.
- When cleaning has been completed, reconnect the panel to the hood canopy and close it by turning the knob in the opposite direction.

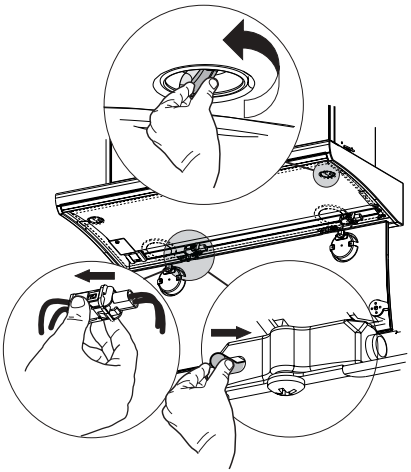

Grease filters

CLEANING METAL GREASE FILTERS


- The filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage.
- Open the Comfort Panel by turning the knobs provided.
- Open the glass panel.
- Remove the filters, one at a time, after disconnecting the relative fastening elements.
- Wash the filters, taking care not to bend them. Allow them to dry before refitting.
- When refitting the filters, make sure that the handle is visible on the outside.
- Close the glass panel again and hook up the comfort panel.

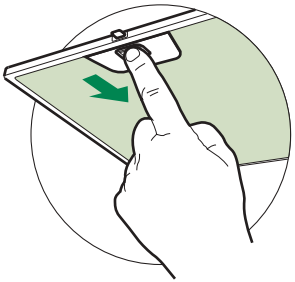

Odour filters (Recirculation version)

REPLACING ACTIVATED CHARCOAL FILTERS

- These filters are not washable and cannot be regenerated, and must be replaced approximately every four months of operation, or more frequently with heavy usage.
- Open the Comfort Panel by turning the knobs provided.
- Open the glass panel.
- Remove the grease filters.
- Remove the saturated activated carbon filter by releasing the fixing hooks
- Replace the grease filters.
- Close the glass panel again and hook up the comfort panel.

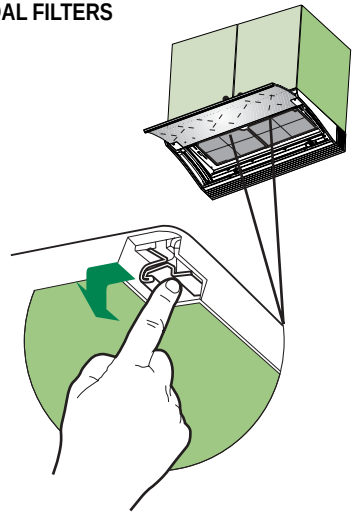

Lighting

LIGHT REPLACEMENT

20 W halogen light.

- Remove the snap-on lamp cover by levering it from under the metal ring, supporting it with one hand.
- Remove the halogen lamp from the lamp holder by pulling gently.
- Replace the lamp with a new one of the same type, making sure that you insert the two pins properly into the housings on the lamp holder.
- Replace the snap-on lamp cover.

